

14" PORTABLE MONITOR

EM2PTAD14BS



USER MANUAL



LET'S REGISTER YOUR PRODUCT



It's super easy, just head on over to elementelectronics.com/register

BENEFITS OF REGISTERING YOUR PRODUCT:



Support

Get assistance quickly by pre-registering your product.



News & Offers

Take advantage of the latest news and special offers from Element.



Updates

Stay current with important product updates and notifications.

WE'RE HERE TO HELP

Find resources and get help for product setup, connecting devices, technical issues, downloading manuals and more!

We're available 24 hours a day, 7 days a week



elementelectronics.com



1.888.842.3577



customerservice@elementelectronics.com

TABLE OF CONTENTS

<i>What's in the box</i>	4
<i>Getting started</i>	4
<i>How to use the folio case</i>	5
<i>Common connectivity options</i>	6
<i>Device compatibility</i>	7
<i>On-screen display (OSD)</i>	8
<i>Troubleshooting</i>	9
<i>Specifications</i>	10
<i>FCC statement & disclosures</i>	11
<i>Warranty</i>	12
<i>Safety instructions</i>	14

**FOR SUPPORT, VISIT
ELEMENTELECTRONICS.COM/SUPPORT**


WHAT'S IN THE BOX



14" Portable Monitor




USB-C to USB-C cable

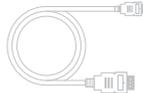

Mini HDMI to HDMI cable




USB power adapter

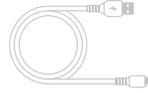

USB to USB-C power cable

GETTING STARTED

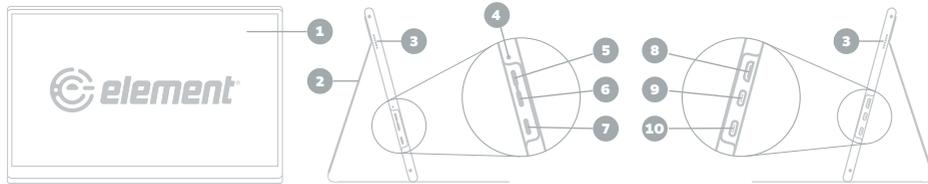


- 1 Screen** – Monitor display.
- 2 Folio case/stand** – Protects your device and acts as an integrated stand.
- 3 Stereo speaker** – For sound. Adjust volume via the OSD.
- 4 LED indicator light** – Lights red when the monitor is in standby mode. Lights green when the monitor is ready to receive signal.
- 5 ▲ button** – Quick press to increase screen brightness, or when within the OSD move your selection choice up or increase a value.
- 6 ▼ button** – Quick press to decrease screen brightness, or when within the OSD, move your selection choice down or decrease a value.
- 7 Power/on-screen display (OSD) button** – Press to power the monitor on or press and hold for 3 seconds to power off. When the monitor is on, press to activate the OSD. Within the OSD, press to confirm your selection.
- 8 Mini HDMI input** – Accepts HDMI video signal.
- 9 USB-C video input** – Accepts video signal from compatible USB-C devices.
- 10 USB-C power input** – Accepts power via the included USB power supply or other compatible power supply capable of outputting at least 15W.

HOW TO USE THE FOLIO CASE


The folio case provides protection and can be used to support the monitor as a stand. Its integrated design is built-in to the monitor and should not be removed.

Step 1:

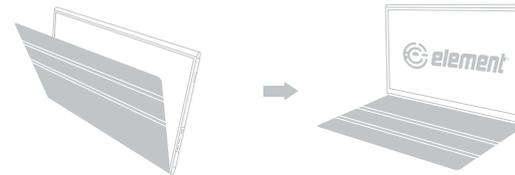


Align the folio case with the opening at the top and the screen facing forward.

Step 2:

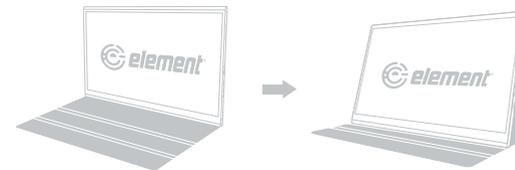

With the folio case open, stand the screen up and place it in a groove of the cover.

Step 3:

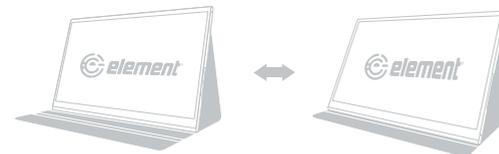

Adjust the screen to your desired angle by placing in either of the grooves.

COMMON CONNECTIVITY OPTIONS

Connect to USB-C Devices




- For compatible USB-C devices with DP Alt Mode.
- Power adapter (included) may be required to power the monitor if source device does not have adequate power supply.
- Touchscreen functionality is supported by compatible USB-C (DP Alt Mode) Windows devices only.

Connect to HDMI® Devices



- Power adapter (included) must be used to power the monitor.
- Touchscreen functionality is not supported for this connection type.

Connect to iOS Devices

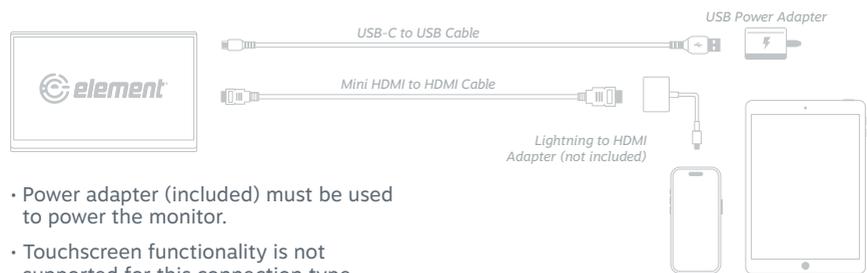

- Power adapter (included) must be used to power the monitor.
- Touchscreen functionality is not supported for this connection type.

Illustrations are for example purposes only. Compatible devices and functionality may vary. Please visit elementelectronics.com for more details on compatibility.

DEVICE COMPATIBILITY

Device	Connection Type	USB Power Supply Required?	Touchscreen Function
Windows devices with USB-C (DP Alt Mode)	USB-C to USB-C cable	No*	Yes
Mac computer with USB-C (DP Alt Mode)	USB-C to USB-C cable	No*	Yes – Limited functionality, with 1-point touch recognition.
USB-C phone or tablet	USB-C to USB-C cable	No*	No
iOS device	HDMI via Lightning to HDMI adapter (not included)	Yes	No
Game console	HDMI	Yes	No

*Power supply may be required to power the monitor if the source device does not have adequate power supply.



ON SCREEN DISPLAY (OSD)

Luminance Setup	Brightness	Adjusts the brightness of the display
	Contrast	Adjusts the contrast of the display
	Black Level	Adjusts the brightness of the darkest parts of the display
	Picture Mode	Adjusts the picture settings for different uses
	HDR	Toggles HDR on/off for greater color contrast
Color Setup	Color Temp	Adjusts the color temperature mode
	Red	Adjusts the brightness of each color
	Green	
	Blue	
Blue Light Filter	Adjusts the level of blue light emitted by the display	
OSD Setup	Language	Changes the language used in the OSD
	H. Position	Adjusts the horizontal position of the OSD
	V. Position	Adjusts the vertical position of the OSD
	Timeout	Adjusts the time before the OSD deactivates
	Transparency	Adjusts the transparency level of the OSD
Image Setup	Image Ratio	Adjusts the proportion of display width to height
	Overdrive	Toggles overdrive on/off to accelerate response time
	Adaptive Sync	Toggles variable refresh rate technology on/off
Other Settings	Input Signal	Changes the input source
	Volume	Adjusts the volume output of the speakers
	Mute	Toggles the mute function of the speakers on/off
	Reset	Resets the monitor to factory settings

TROUBLESHOOTING

Problem	Possible Reason	Solution
The start-up screen is flashing on and off	Insufficient power supply	Use the included power supply or ensure your power source is outputting at least 15W
The touchscreen isn't working	Incompatible host device	Ensure your host device can receive touch data via USB-C. Note that touch data cannot be transferred over a HDMI connection
No screen image	If the LED indicator is not on	Turn on the monitor with the power button
	If the LED indicator is green	The monitor isn't recognizing the signal, so try reconnecting the cable and ensuring the host device is outputting an image
The screen flashes, blurs or appears distorted	The host device is outputting an incompatible signal	Ensure your host device is set to 920 x 1080 resolution and 60 Hz refresh rate, or other compatible resolution
	Poor connection	Reconnect the cable
The speakers aren't working	Mute function is on	Change the mute setting in the OSD
	The monitor is not selected as the audio device	On your host device, make sure the monitor is selected as the audio output device



SPECIFICATIONS

Screen Size	14" diagonally
Panel Type	IPS
Touchscreen	10-point touch for compatible devices
Native Resolution	1920 x 1080
Refresh Rate	60 Hz
Response Time	3 ms (with overdrive function on)
Brightness	250 cd/m ²
Contrast Ratio	1000:1
Aspect Ratio	16:9
Display Colors	16.7 million
Speakers	Stereo, 1W x 2
Viewing Angle	178°(H) x 178°(V)
Power Input	5V/3A (15W)
Inputs	USB-C (for power) x 1, USB-C (for display) x 1, Mini HDMI x 1

*Specifications are subject to change without notice.



FCC statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC radiation exposure statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Microsoft and Windows are trademarks of the Microsoft group of companies.

ELEMENT LIMITED WARRANTY TO ORIGINAL CUSTOMER

LCD MONITOR – All Models (the “Product”)

This Product (including any accessories included in the original packaging) as supplied and distributed in new condition, is warranted by Element TV Company, LP (“Element”) to the original purchaser of the Product (the “Original Customer” or “you”) against defects in material and workmanship (“Warranty”) as follows:

1. WARRANTY SERVICE (Parts, Labor and/or Replacement): For a period of **one (1) year** from the date of the Original Customer purchase (“the Warranty Period”), if this Product or any of its parts are determined by Element or an Element authorized customer service provider to be defective in material or workmanship, Element will, at its sole discretion and option: (i) supply, at no charge to the Original Customer, new or rebuilt replacement parts in exchange for defective parts, (ii) repair the Product and pay the labor charges of such Element authorized service provider for same, at no charge to the Original Customer, (iii) replace the Product with a new or refurbished product of similar or better quality, at no charge to the Original Customer, or (iv) refund the original purchase price of the Product (excluding tax) to the Original Customer. After the Warranty Period, the Original Customer must pay for all parts, labor and replacement costs associated with the Product, regardless of any defects in the Product.

A. SHIPPING COSTS: Notwithstanding the foregoing, the Original Customer is responsible for any shipping or transportation charges incurred to ship or otherwise deliver the Product or part(s) to Element or an Element authorized service provider for diagnosis, repair or replacement. The Original Customer shall not return the Product to Element without Element’s prior written consent. Element recommends that the Original Customer insure the Product for its full replacement cost when shipping.

B. TIMING AND PROCEDURE: Before Warranty service can commence, the Original Customer must contact Element for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty Period set forth above, **MUST** be presented to an Element authorized customer service provider in order to obtain the requested service. Please call the Toll-Free Customer Service Line at (888) 842-3577 to obtain Warranty Service and Troubleshooting information. Please have your model and serial number available, along with your date of purchase of the Product. You can also visit us online at: www.elementelectronics.com.

2. EXCLUSIONS AND LIMITATIONS TO WARRANTY SERVICE

This Warranty covers manufacturing defects in materials and workmanship encountered in the normal, non-commercial use of the Product, and does not cover (a) damage or failure caused by or attributable to Product abuse or misuse, failure to follow instructions, safety information, and warnings accompanying the Product; (b) improper installation or maintenance, alteration, accident, or excess voltage or current; (c) improper or incorrectly performed repairs by non-authorized service facilities; (d) onsite customer instruction or adjustments; (e) transportation, shipping, delivery, insurance, installation or set-up costs; (f) costs of product removal, transportation or reinstallation costs;

(g) ordinary wear and tear, cosmetic damage or damage due to acts of nature, including but not limited to water, floods, wind, tornado, earthquake or fire, or due to damage caused by automobile accidents or extraordinary impact events, such as dropping or crushing;

(h) commercial use of the Product; or (i) modification of the Product or to any part of the Product. In addition, this Warranty does not cover images “burnt” into the screen.

This Warranty applies to the Original Customer only and does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (e.g., fuses, batteries, bulbs etc.). The Warranty is invalid if the factory-applied serial number has been altered or removed from the Product. This Warranty is valid only in the United States and Canada, and only applies to products purchased and serviced in the United States and Canada. All replaced parts and Products, and Products on which a refund is made, become the property of Element. The addition of equipment or features to the Product that are not manufactured or recommended by Element could affect the intended function of the Product, and therefore may void the Warranty. The Warranty is contingent upon the proper use, maintenance and care of the Product. The Warranty may be void if the Product has been used in a manner contradictory to or in violation of the terms of the user’s manual, warnings or instructions accompanying the Product.

This Warranty is made in lieu of and supersedes all other warranties or conditions of merchantability or fitness for a particular purpose or general use, whether express, implied, collateral, statutory, or provided by common law, the Uniform Commercial Code or otherwise. Element further disclaims all warranties after the end of the Warranty Period defined above. No other express warranty or guaranty given by any other person, firm or entity with respect to the Product shall be binding on Element. Repair, replacement, or refund of the original purchase price, at Element’s sole discretion, are the exclusive remedies of the customer. Element shall not be liable for any incidental or consequential damages caused by the use, misuse or inability to use the Product. These include but are not limited to any damages in the form of lost profits, loss of use, legal fees, economic loss, personal injuries, or any other damages caused by circumstances beyond the control of Element. Notwithstanding the foregoing, the customer’s recovery shall not exceed the purchase price of the Product. This Warranty shall not extend to anyone other than the original customer who purchased the Product, and is not transferrable. No person is authorized to alter, extend or waive the Warranty of Element.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on warranties, so the above limitations or exclusions may not apply to you. This Warranty gives you specific rights, and you may have other rights, which vary from state to state. The exclusions and limitations to the Warranty apply to the maximum extent permitted by law and unless restricted or prohibited by law. Where any term of this Warranty is prohibited by applicable law, it shall be null and void, but the remainder of this Warranty shall remain in effect.

PLEASE DIRECT ALL CORRESPONDENCE TO:

Element TV Company, LP Customer Service

customerservice@elementelectronics.com

(888) 842-3577

www.elementelectronics.com

PLEASE CONTACT CUSTOMER SERVICE TO CONFIRM ADDRESSES AND PROCEDURES FOR WARRANTY SERVICE.

**FOR SUPPORT, VISIT
ELEMENTELECTRONICS.COM/SUPPORT**



Safety instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

 **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

 **WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



 This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

 This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

 This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should be disposed of as unsorted waste and must be collected separately. As a consumer, are responsible for ensuring that this product is disposed of properly.

Element offers environmentally responsible options to recycle your unwanted consumer electronics device. More information can be found by visiting:

www.elementelectronics.com/sustainability





*Element, the Element Logo, and Bring it home are trademarks of
Element Brand Holding, LLC. ©2022, Element Brand Holding, LLC,
All Rights Reserved.*