

4K

86"
CLASS

QUICK START GUIDE



 **element** • **xumoTV**



WHAT'S INCLUDED





Voice Remote

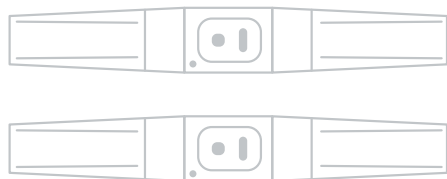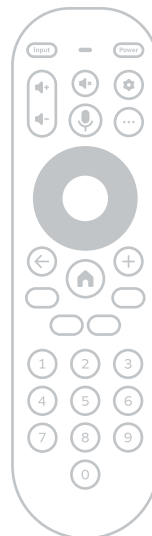

TV Stand

 Stand Screws

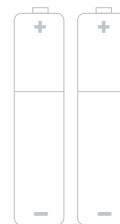


2 AAA Remote Batteries

WHAT YOU'LL NEED (NOT INCLUDED)



Screwdriver
Phillips head

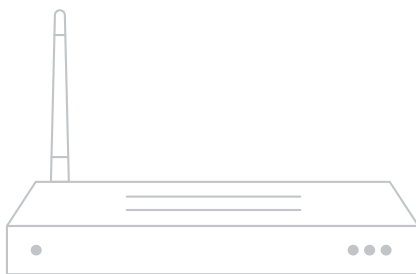

Wireless Router
Needed for streaming



Internet connection
Needed for streaming



Smartphone, computer or tablet
Needed for setup

CONNECT DEVICES TO YOUR TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (*cables and external devices not included*). Loose connections can affect your picture and audio quality.

ANT



Connect an outdoor or indoor antenna.

HDMI




Connect a Blu-ray or DVD player, gaming console, or other external devices to your TV. Highest quality audio/visual connection.

OPTICAL



Connect an optical cable from an external digital audio system.

HEADPHONE

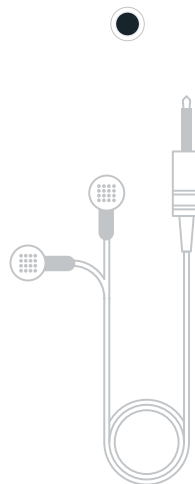

Connect headphones or external speakers.

LAN




Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.

CONNECT DEVICES TO YOUR TV


(continued)

USB

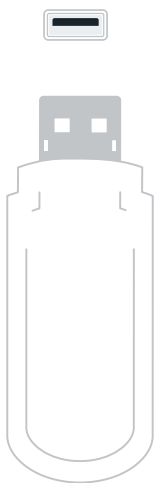


Connect a USB device for browsing photos, music, or videos.

MINI AV IN

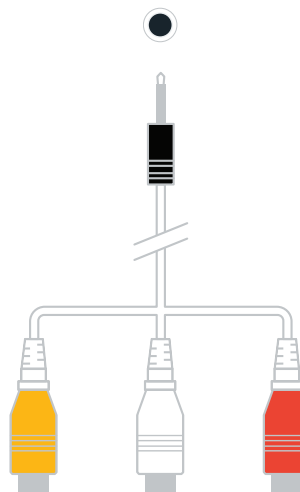

Connect a composite video cable and left-right audio cables from an external AV device (AV adapter included).

SETTING UP YOUR TV

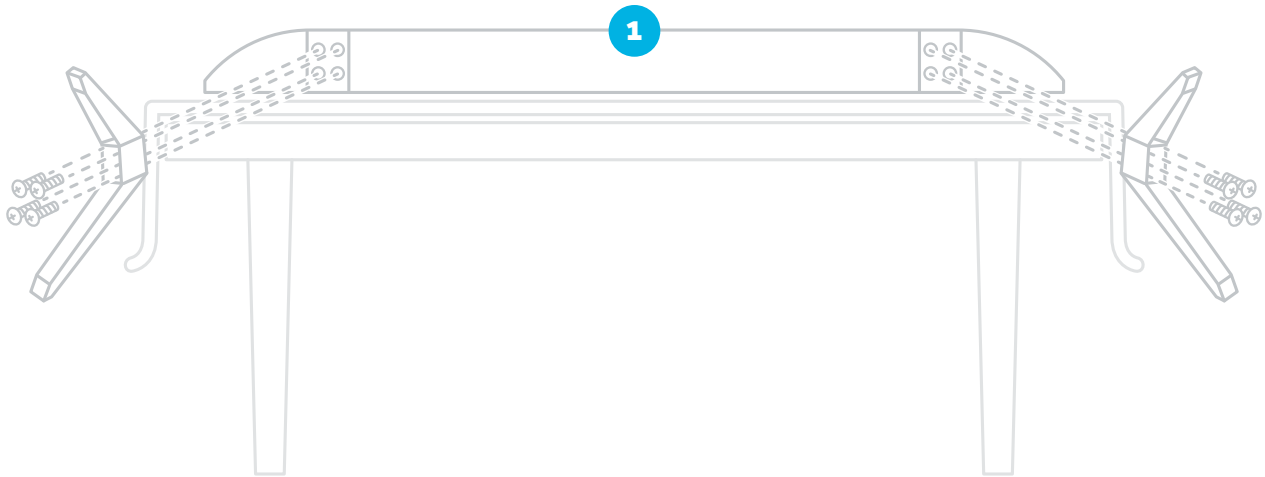

Installing the stands

⚠ WARNING: Your TV is heavy (>82 lbs)! A minimum of two people are required for installation. Do not install the stands if you want to wall mount your TV.


You will need: Phillips screwdriver (not included)

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Use the handles on the back of the TV to help lift and place it upright on a stable, level surface.

To avoid damages, never carry your TV by holding or putting pressure onto the glass. Use the attached handles when lifting and take extra care when handling.

SETTING UP YOUR TV

(continued)

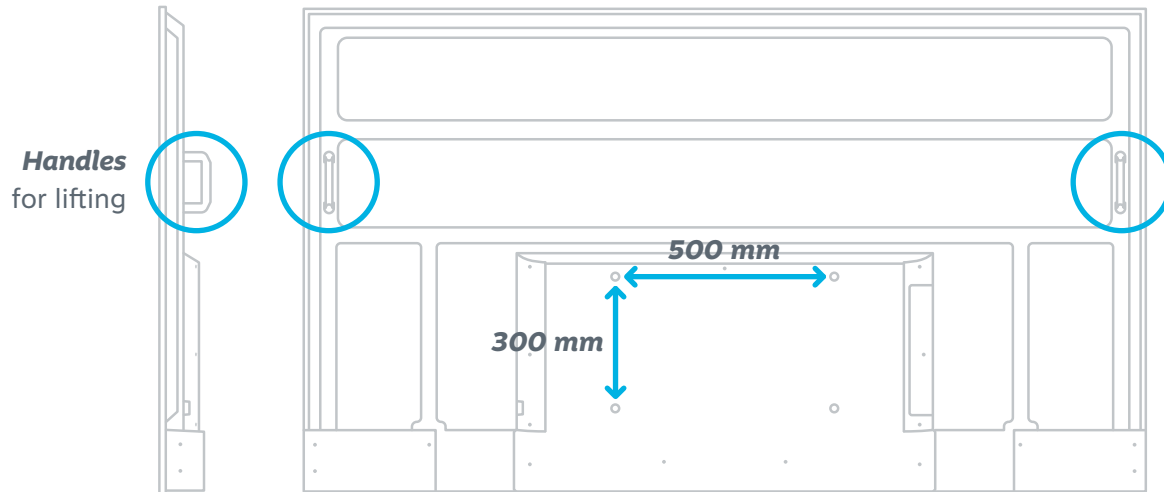

Mounting your TV

If you choose to wall mount your TV, please ensure your wall mount (not included) and supporting structure can hold >82 lbs and is properly anchored.

Your TV has four mounting holes for a 500 x 300 mm VESA approved mounting bracket.

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Mount the VESA bracket using four M8 x 25 mm (max depth) screws (not included) and follow the mounting instructions provided with your wall mount.

If you have any doubts about your ability to safely install your TV, please consult a professional installer.

FOR SUPPORT, VISIT [ELEMENTELECTRONICS.COM/SUPPORT](https://www.elementelectronics.com/support)

SETTING UP YOUR TV

(continued)


Setting up your remote

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

Pairing your remote to a new Xumo TV

Before using your remote, you'll need to pair it with your TV. If you put batteries in your remote within 15 minutes of plugging in your TV for the first time, your remote will automatically pair to your TV. Should you experience any issues, follow the below instructions:

Pairing your remote to an existing Xumo TV






1. Press the  button
2. Select **Remote > Pair your remote to your TV**
3. Follow the on-screen instructions
4. If pairing fails, turn off your TV and unplug from the power source. Plug TV back in, power on, and try steps 1-3 again.



Pairing your remote to a sound system

1. Press the  button
2. Select **Remote > Pair your remote and sound system**
3. Follow the on-screen instructions.

How to reset your remote

1. Hold the  and  buttons for 3 seconds until the light at the top of the remote turns solid green
2. Press 9, then 8, then 4 (the light will blink red a few times)
3. Hold the  and  buttons for 3 seconds again
4. Press 9, then 8, then 1
5. Wait for the light at the top of the remote to flash red again
6. With your remote control pointed towards your TV, try pressing the  button then other keys to make sure your remote is working properly


Note: Voice control will not work until you pair your remote. Voice commands only work when your TV is connected to the internet.

TIP: Always replace dead batteries with two brand new batteries from the same manufacturer. Never use damaged batteries.

If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

SETTING UP YOUR TV

(continued)

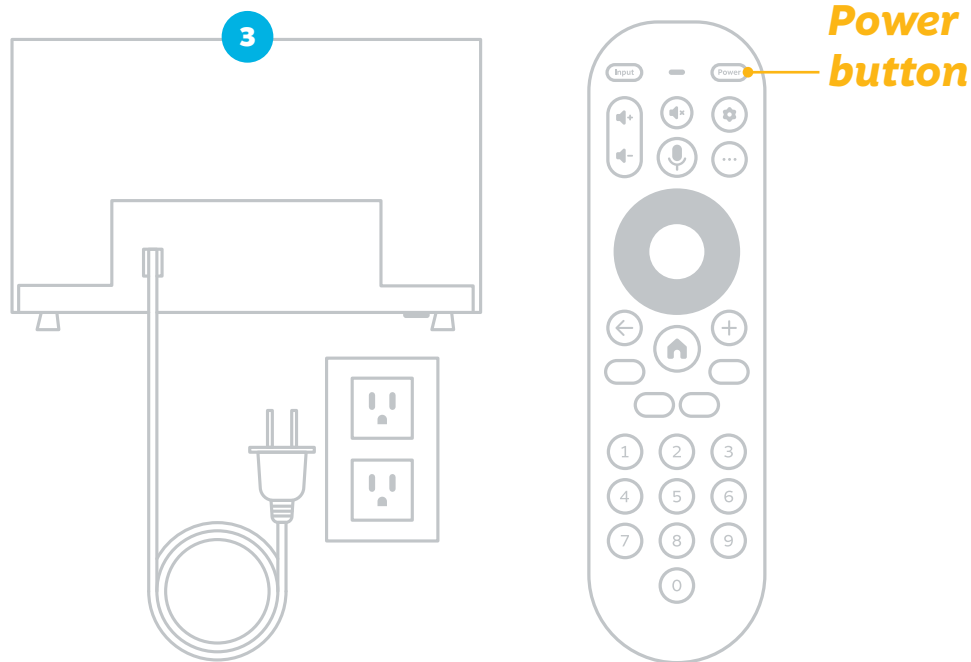


Plug in and turn on TV

Plug your TV into the wall outlet and press the power button on your remote control. Your TV will display a launch screen showing the Element and Xumo TV logos, followed by the first setup screen.

SETTING UP YOUR TV

(continued)

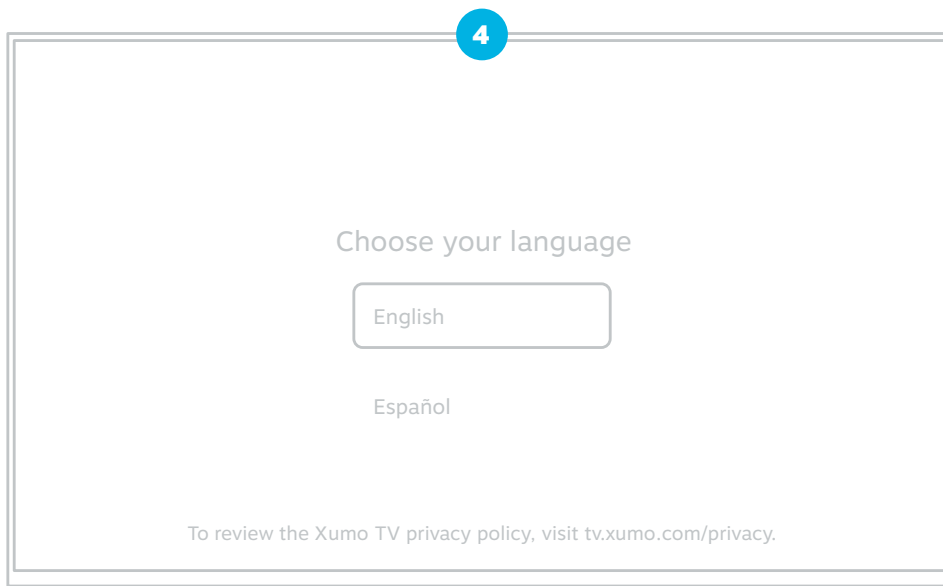

Follow the on-screen instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Connecting your TV to the Internet gives you access to all the things that make your TV smart, including apps, voice controls, and more. Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a regular TV and can connect it later within settings.

SETTING UP YOUR TV

(continued)



Activate your TV

To activate your TV you'll need a computer, smartphone or tablet. Once you see the activation code on the TV screen you can visit xumo.com/activate (or simply scan the QR code on-screen with your smart device camera) and follow the on-screen instructions to complete registration. You'll be directed to the home screen when setup is complete.


You may also create a Xumo account with a payment method if you would like to make purchases on your TV. *Note: Creating a Xumo account and adding payment details is optional and not required to use your TV.*

*A paid subscription or other payments may be required for some streaming channels.
Channel availability subject to change and varies by country or region.*

FOR SUPPORT, VISIT [ELEMENTELECTRONICS.COM/SUPPORT](https://elementelectronics.com/support)



USING YOUR REMOTE

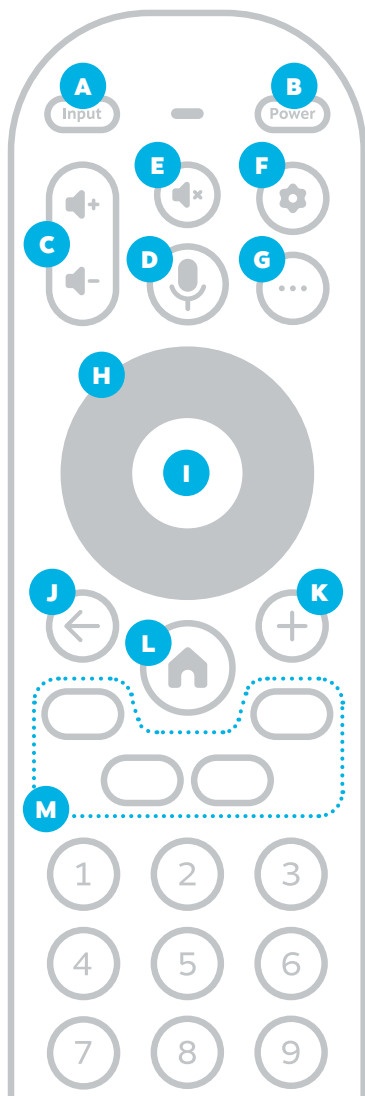


- A** **Input** Change your TV's input so that you can use connected devices like media players, gaming systems, and sound systems
- B** **Power** Turn your TV on and off
- C** **Volume** Make your TV louder or softer
- D** **Voice Control** Search across your apps and control your TV with just your voice – just press and hold the button, say a command, then release it
- E** **Mute** Turn your TV sound on and off
- F** **Settings** Press once to open the Settings menu, or press twice to access your accessibility shortcut
- G** **More** See more options like program descriptions depending on which screen you're on
- H** **Navigation Pad** Select up, down, left and right
- I** **Select** Confirm your selection
- J** **Last/back** Return to the previous screen
- K** **Add** Add the TV show or movie you've selected to My List
- L** **Home** Return to the home screen
- M** **App shortcuts** Launch the labeled app when your TV is connected to the Internet

CONNECTING AN ANTENNA

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

1. To connect your TV to an antenna, connect a coax cable (not included) into your TV's **ANT** port and the other end into your device.
2. Turn your TV on and press the home button on your remote.
3. Select the **Antenna** tile, or open **Settings > Antenna and inputs > Antenna > Scan for channels**
4. Follow the on-screen instructions.

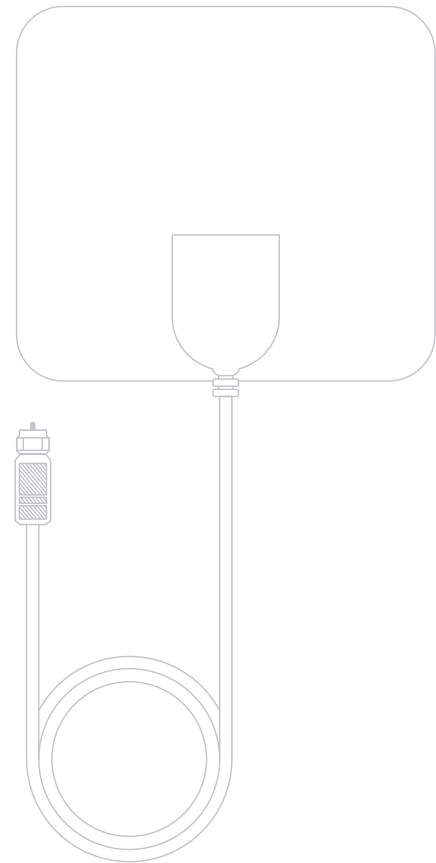

UNIVERSAL REMOTE SETUP

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to your TV.



LET'S REGISTER YOUR PRODUCT



It's super easy, just head on over to elementelectronics.com/register

BENEFITS OF REGISTERING YOUR PRODUCT:



Support

Get assistance quickly by pre-registering your product.



News & Offers

Take advantage of the latest news and special offers from Element.



Updates

Stay current with important product updates and notifications.



Warranty

Receive a 2-year limited warranty with registration*

**1-year manufacturer's limited warranty with purchase, or 2-year limited warranty with product registration within 90 days of purchase. See warranty card for details*

WE'RE HERE TO HELP

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more!

We're available 24 hours a day, 7 days a week



elementelectronics.com



1.888.842.3577



customerservice@elementelectronics.com

To download the full Xumo TV User Manual, and review the latest information on common issues and solutions, visit tv.xumo.com/support

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.

FOR SUPPORT, VISIT [ELEMENTELECTRONICS.COM/SUPPORT](https://elementelectronics.com/support)





Element, the Element Logo, and Bring it home are trademarks of Element Brand Holding, LLC. ©2024 Element Brand Holding, LLC. All Rights Reserved.
Xumo TV, Xumo Play, the Xumo logos, and all other Xumo product names, logos, slogans or marks are the trademarks of Xumo or its licensors. ©2024 Xumo. All Rights Reserved.