



OUTDOOR TELEVISION


Quick Start Guide



 **element • Roku TV**

Roku, Roku TV, and the Roku logo are the trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.


WHAT'S INCLUDED

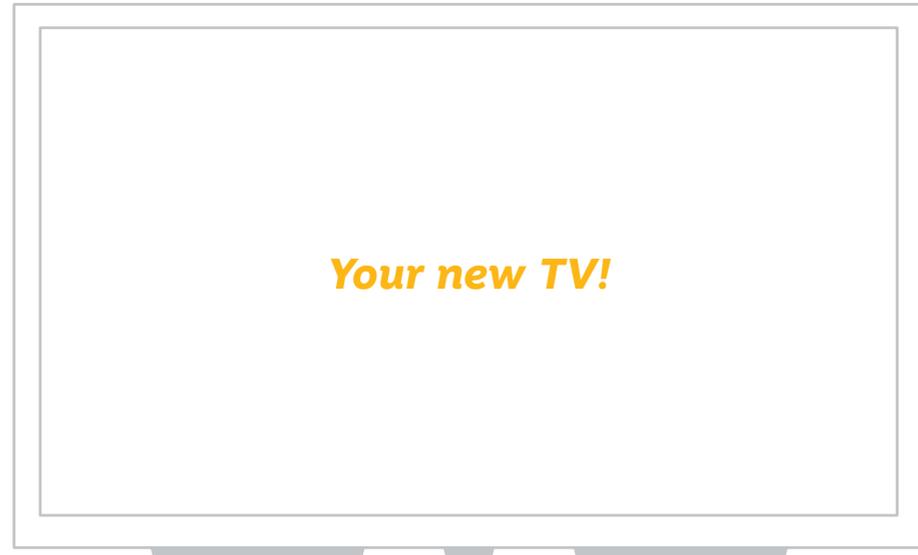

Remote



Protective Remote Sleeve

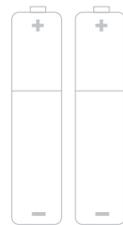


2 AAA Remote Batteries

WHAT YOU'LL NEED (NOT INCLUDED)



Screwdriver
Phillips head
needed for mounting

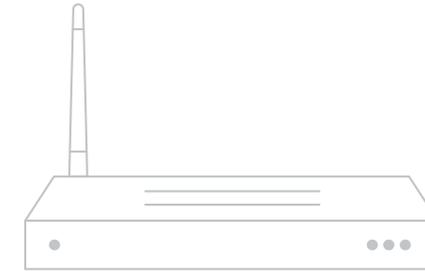

Wireless Router
Needed for streaming



Internet Connection
Needed for streaming



Smartphone, Computer or Tablet
Needed for setup

CONNECT DEVICES TO YOUR TV

Your TV's connections are secured behind a panel door on the back of your TV. This panel is lined with foam to keep dust & moisture out and keep your cords dry and in place.

To access your TV's ports and connect devices, complete the following:

Before mounting:

1. Place TV screen-down on a clean, flat, soft surface (ie: blanket) to prevent scratches or damage to the screen.
2. Locate the panel door on the back of your TV, remove the seven screws by hand and open panel door. *See figure one.*
3. Find the power cord (located inside the door) and run the plug out to the bottom of the panel. Do not connect to power until all cable connections have been made. *See figure two.*
4. Plug in any devices and ensure they are securely connected. Device cords should run flat out the bottom of the panel (between the two bottom screw holes) and not be layered. *See figure two.*
5. Close the panel door and replace the seven screws tightly by hand, ensuring there are no large gaps between the foam and cords.

figure one


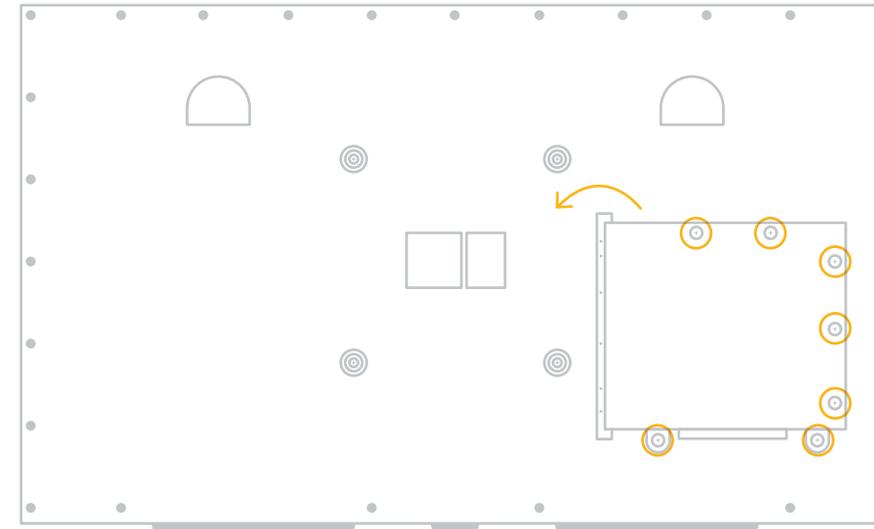


figure two

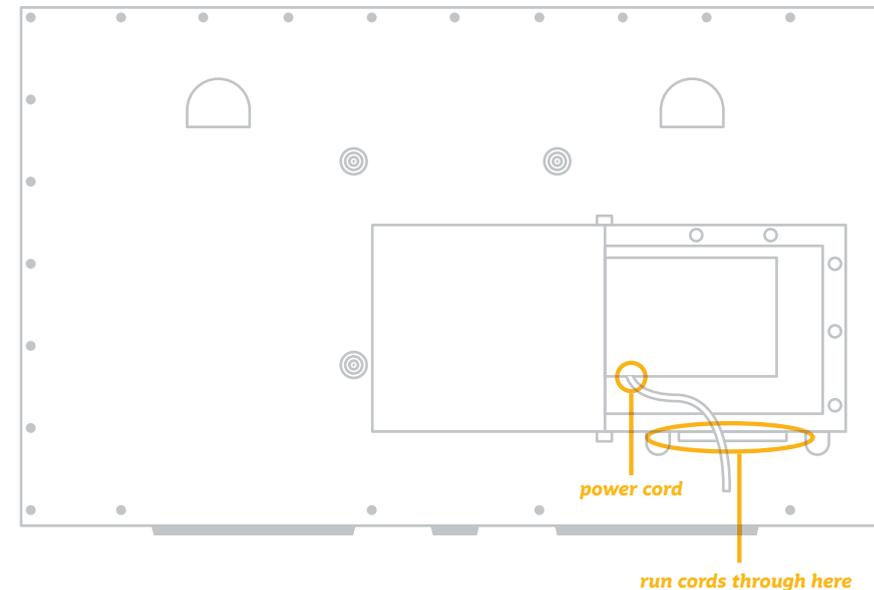

CONNECT DEVICES TO YOUR TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (*cables and external devices not included*). Loose connections can affect your picture and audio quality.

ANT/CABLE



Connect an outdoor or indoor antenna.

HDMI




Connect a Blu-ray or DVD player, gaming console, or other external devices to your TV. Highest quality audio/visual connection.

OPTICAL



Connect an optical cable from an external digital audio system.

HEADPHONE

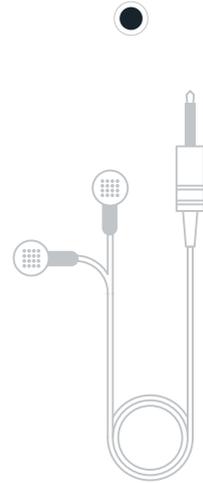


Connect headphones or external speakers.

LAN



Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.

USB

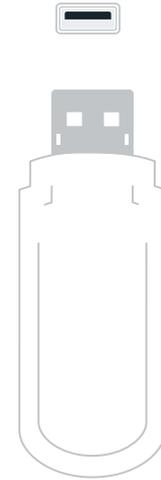

Connect a USB device for browsing photos, music, movies, or pausing live TV.

VIDEO IN



Connect a composite video cable and left-right audio cables from an external AV device.

L



R



CONNECT DEVICES TO YOUR TV

(continued)

TV PLACEMENT

IMPORTANT: Choose a location for your TV where it will NOT be in direct sunlight and is partially shaded (ie: near trees, under structures, patio cover, etc.). Remember that the position of the sun changes throughout the day, so choose a location and position based on the time of day you would use it most often.

⚠ WARNING: The TV must be installed at least five feet from a pool, spa, or other body of water.



MOUNTING YOUR TV


Your TV has four mounting holes for a VESA approved mounting bracket (not included). Please ensure your wall mount can hold >71lbs and is compatible with a 300 x 300 VESA mount pattern. A minimum of two people are required for installation.

CAUTION: *Your new TV is heavy! If you have any doubts about your ability to safely install your TV, please consult a professional installer.*

MOUNTING YOUR TV

(continued)

1. Place TV screen-down on a clean, flat, soft surface (ie: blanket) to prevent scratches or damage to the screen.
2. Using a Phillips head screwdriver, remove the four screws located inside the VESA mount points as shown. **⚠ WARNING:** The included screws are NOT for use with a wall mount and should be removed before mounting.
3. Mount the VESA bracket using four M8 x 20 mm (max depth) screws (not included) and follow the mounting instructions provided with your wall mount.

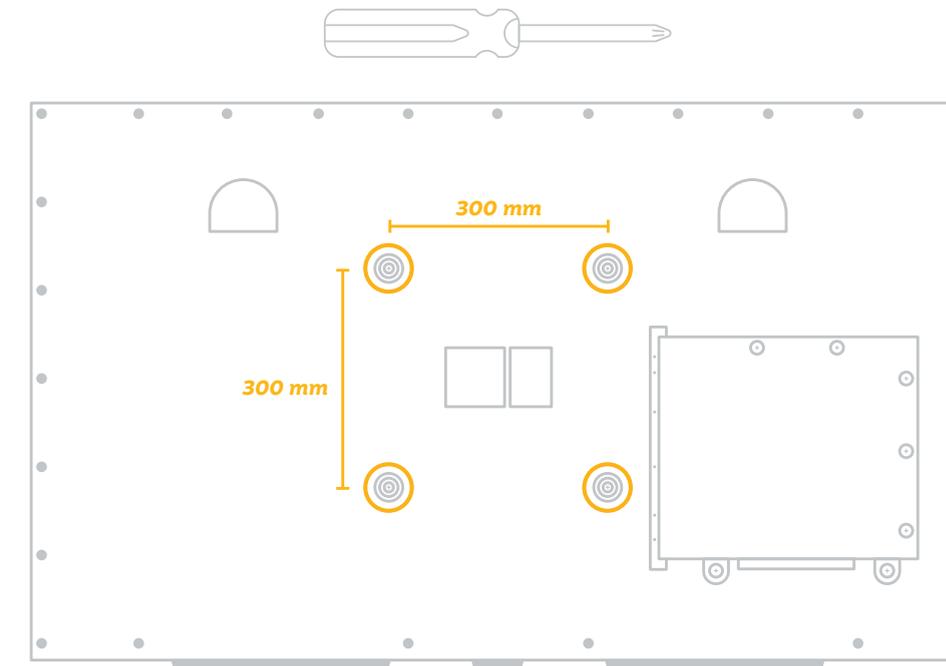

TIP: Please connect all your devices prior to mounting your TV, as the connections panel will not be easily accessible after mounting.

SETTING UP YOUR TV

1

Place Batteries in Remote


Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

Place remote inside protective sleeve for added protection against falls or condensation. The protective sleeve is not weather-proof. Please properly store your remote indoors when not in use.



If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

2

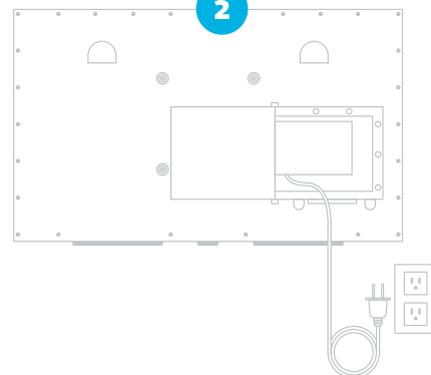

Plug in and Turn on TV

Find your TV's power cord by accessing the panel door located on the back of your TV (see pages 4-5 for complete access instructions). Next, plug your TV into the wall outlet and press the power button on your remote control.


Power Button



SETTING UP YOUR TV

(continued)

3

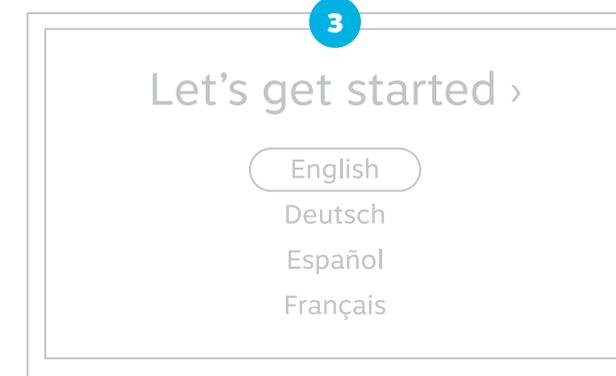

Follow the On-Screen Instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a regular TV.

4



Activate Your Smart TV

Activate your TV using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your TV and access entertainment across thousands of streaming channels.

NOTE: ROKU DOESN'T CHARGE FOR ACTIVATION SUPPORT - BEWARE OF SCAMS.


Roku accounts are free and while a valid credit card number is not required to create a Roku account, saving your credit card information makes renting and purchasing entertainment from the Roku Channel Store fast and convenient.

Once connected to your account, your TV will automatically update with the latest software, and you can start streaming immediately.

A paid subscription or other payments may be required for some streaming channels. Channel availability subject to change and varies by country.

USING YOUR REMOTE

The Roku TV remote should feel right at home in your hand. We designed it to be incredibly intuitive for watching TV and navigating on-screen menus.

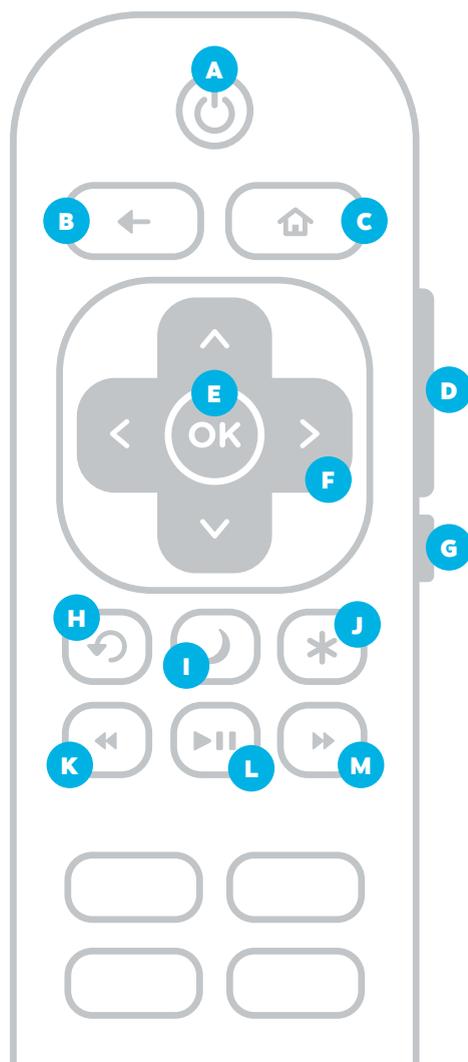

- A Power** Turn TV on and off
- B Back** Return to previous screen
- C Home** Return to Roku Home screen
- D Volume** Raise and lower volume
- E OK** Select an option from a menu
- F Navigate** Move up, down, left or right
- G Mute** Mute and restore sound
- H Instant Replay** Replay the last few seconds of streaming video
- I Sleep** Set the sleep timer
- J Options** Access to picture settings, more streaming channel icons and more
- K RWD** Rewind streaming video, scroll left one page at a time
- L Play/Pause** Start or pause playback
- M FWD** Fast forward streaming video, scroll right one page at a time

TIP: The  button gives you easy access to picture settings, display options and more. Try it on every screen.

Actual remote includes pre-set channel buttons with channel logos.

QUICK START GUIDE

CONNECTING AN ANTENNA


With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

- 1.** When the setup wizard is complete select the Antenna/Live TV icon from the home screen.
- 2.** Follow the on-screen instructions.
- 3.** Whenever you want to watch antenna TV, select the Antenna/Live TV icon.
- 4.** Live TV Pause feature: Pause up to 90 minutes of live antenna TV when you connect a 16 GB or larger USB drive to your TV. All data on the USB drive will be deleted prior to use.

UNIVERSAL REMOTE SETUP

If you prefer to use your cable set-to box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to your TV.

You can find the most common cable and satellite provider universal remote codes at roku.com/universalremote.

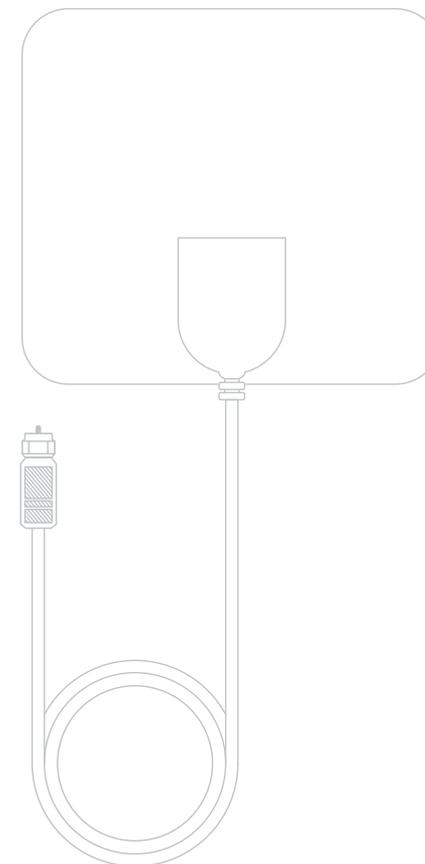

LET'S REGISTER YOUR PRODUCT




It's super easy, just head on over to elementelectronics.com/register

BENEFITS OF REGISTERING YOUR PRODUCT:



Support

Get assistance quickly by pre-registering your product.

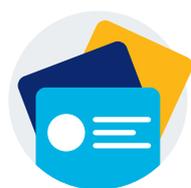

News & Offers

Take advantage of the latest news and special offers from Element.



Updates

Stay current with important product updates and notifications.



Warranty

Receive a 2 year warranty with product registration*

*1 year manufacturer warranty with purchase or 2 year warranty with product registration within 90 days of purchase.

WE'RE HERE TO HELP

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more!

We're available 24 hours a day, 7 days a week



elementelectronics.com



1.888.842.3577



customerservice@elementelectronics.com

To download the full Roku TV User Guide visit go.roku.com/roktv



Bring it home.™