


4 CONNECTING TO POWER

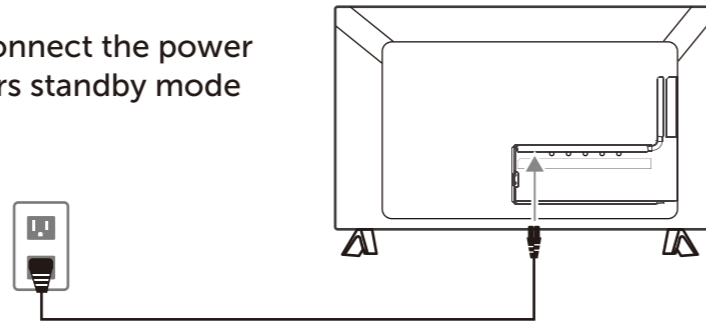

1. After connecting all your devices, connect the power cord to a power outlet. The TV enters standby mode and its indicator lights red.



2. Press  (power) on the TV or remote control to turn on the TV. The red indicator turns blue.



5 SETUP WIZARD

1. Press the   buttons to select a setting, then press **OK** to save it.
2. Select the language you want to be displayed in the menu: English, French, or Spanish.
3. Select whether you want to connect to the internet with a **LAN** or **WIFI** connection.
 - If you select a **LAN** connection, make sure that you connect an Ethernet cable. Your TV connects to your network automatically.
 - If you select a **WIFI** connection, your TV scans for networks and lists them. Select your network from the list, enter your network password, then select **CONNECT**.
4. Follow the on-screen instructions to complete setup.



TROUBLESHOOTING

See your *User Manual* for answers to common questions.

SUPPORT INFO

Element TV Company, LP. Customer Service
ONLINE CHAT: www.elementelectronics.com
Customer Support: 1(888) 842-3577
customerservice@elementelectronics.com

WARRANTY

We recommend keeping your TV box for the duration of your warranty (one year). See your *User Manual* for details.

JOIN THE ELEMENT COMMUNITY:




Copyright © 2019
Element Brand Holding, LLC. All rights reserved. Element and the Element logo are trademarks of Element Brand Holding, LLC.

element®

QUICK START GUIDE

SMART TV

Product may vary. Please refer to the actual product.

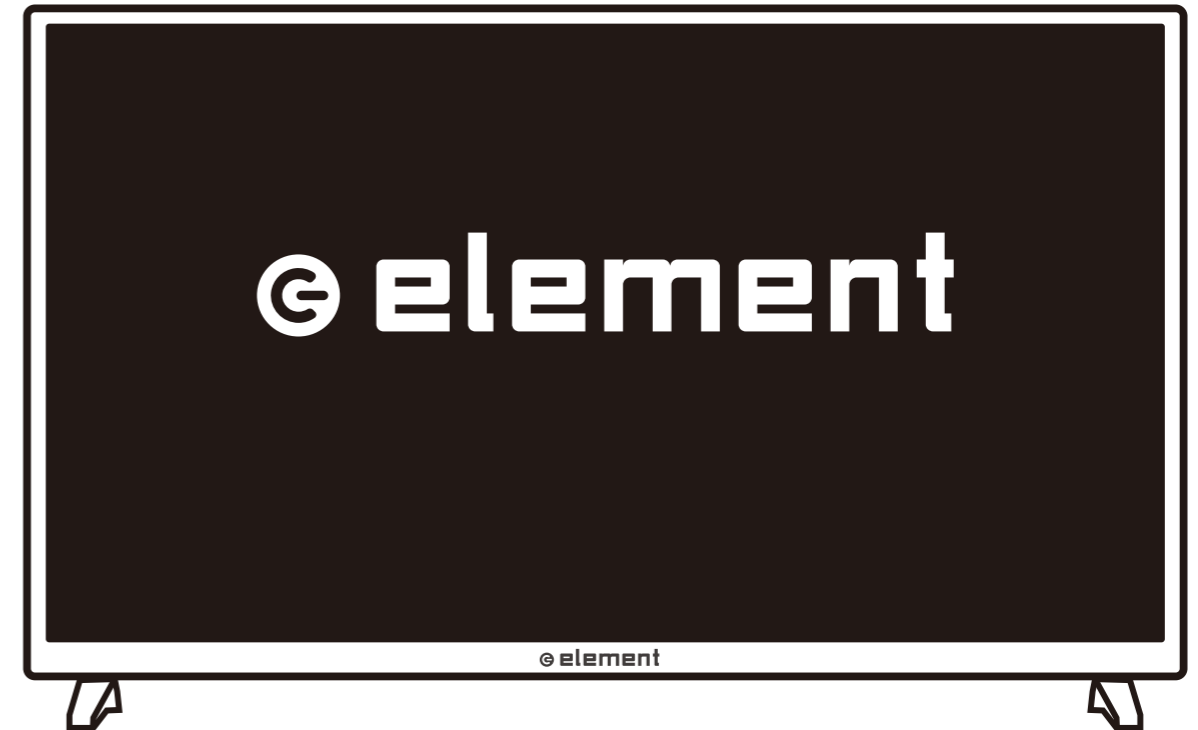

Please read all instructions carefully before using this TV. Keep the User Manual for future reference.




REGISTER YOUR PRODUCT

Take a moment to register your product at elementelectronics.com/registration to receive:

- **Customized Support** - Get assistance quickly by pre-registering your product.
- **News & Offers** - Take advantage of the latest news and special offers from Element.
- **Safety & Satisfaction** - Stay up-to-date with important product updates and notifications.

Have questions? Chat live at www.elementelectronics.com

WHAT IS INCLUDED?

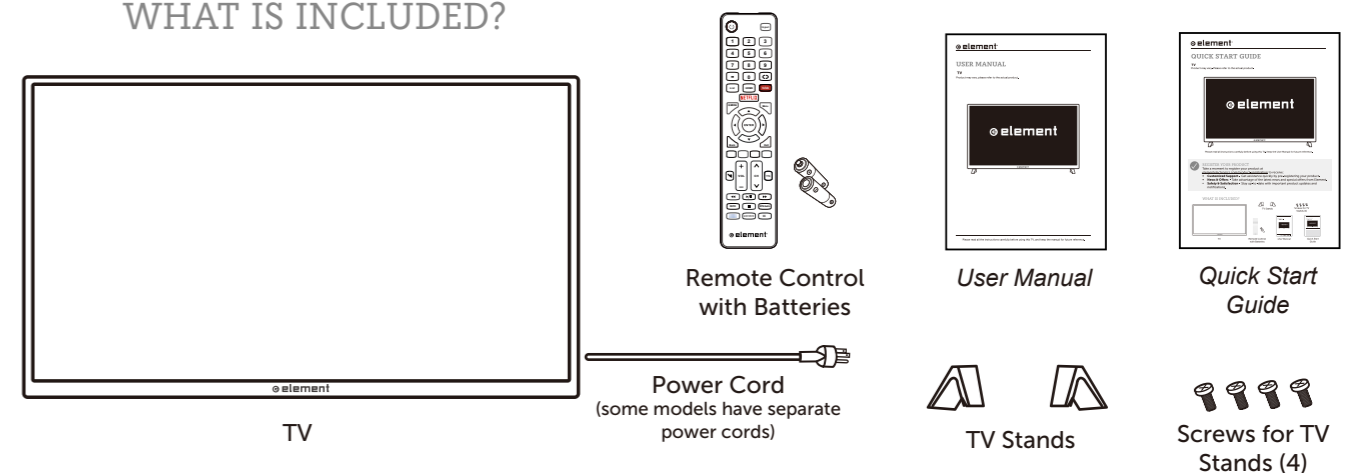


1 INSTALLING THE STANDS

Do not install the stands if you want to wall mount your TV. See your wall mount instructions for more information or chat live at www.elementelectronics.com.

You will need: Screwdriver (not included)

1. Place the TV screen-down on a clean, flat surface to prevent scratches or damage to the screen.
2. Attach each stand with the provided screws using a screwdriver.
3. Place the TV upright on a stable, level surface.

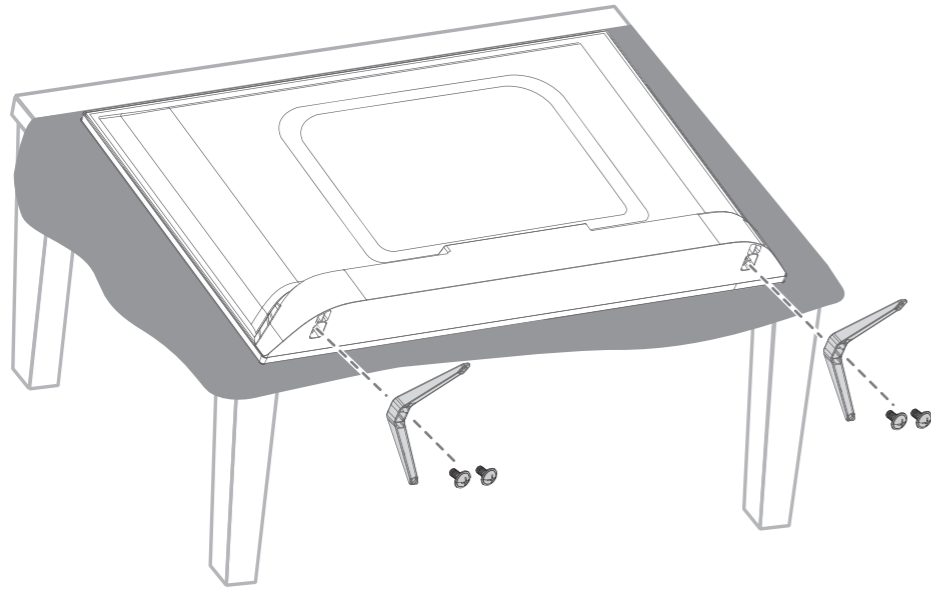


*Product may vary. Please refer to the actual product.

2 INSTALLING REMOTE CONTROL BATTERIES


1. Remove the cover from the remote control's battery compartment.



2. Insert two AAA batteries (included), making sure to match the + and - terminals to the symbols in the compartment.

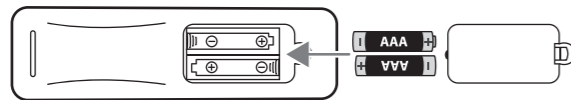

3. Replace the cover on the remote control's battery compartment.
Note: See your *User Manual* for information about your remote control's functions.

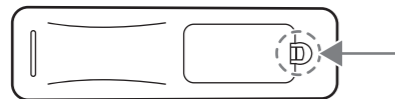

3 CONNECTING DEVICES

Choose a connection type for each of your devices. For more detailed instructions, see your *User Manual* or chat live at www.elementelectronics.com. *Product may vary. Please refer to the actual product.

COAXIAL
Good quality
Coaxial wall jack, antenna, HD antenna

COMPOSITE (AV)
Better quality
DVD/Blu-ray player, game console, computer, cable/satellite box, video camera, recorder, VCR

HDMI
Best quality
DVD/Blu-ray player, game console, computer, cable/satellite box

DIGITAL AUDIO
Best audio quality
Home theater system, speakers, soundbar
Digital optical
OR
Coaxial (ORANGE)

OR

ANALOG AUDIO
Good audio quality
Home theater system, speakers, soundbar
3.5 mm-to-RCA audio cable
OR
3.5 mm-to-3.5 mm audio cable

COMPONENT
Good quality
DVD/Blu-ray player, game console, computer, cable/satellite box, video camera, recorder, VCR

ETHERNET
Wired Internet
Router