



**Element 2.1 Sound bar  
with wireless subwoofer**



**INSTRUCTION MANUAL**

**MODEL: ESB2118**

# Contents

---

<b>Safety Warnings</b> .....	3
<b>Support</b> .....	5
<b>Unpacking</b> .....	6
<b>Product Overview</b> .....	7
Front View.....	7
Right View.....	7
Rear View.....	8
Subwoofer View.....	8
<b>Remote Control</b> .....	9
<b>Battery Replacement for the Remote Control</b> .....	9
<b>Remove the Plastic Strip from the Remote Control</b> .....	10
Handling the Battery.....	10
Handling the Remote Control .....	10
<b>Remote Control Operation Range</b> .....	10
<b>Speakers Placement</b> .....	11
<b>Connections</b> .....	13
Using the OPTICAL / COAXIAL Connection .....	13
Using the AUX Connection .....	14
Using the Audio Connection.....	14
Connecting to the AC Supply.....	14
<b>Speakers Connection and Pairing</b> .....	15
<b>General Operation</b> .....	16
Standby / ON / Automatic Power Off Function.....	16
Selecting Modes .....	16
Adjusting the Volume .....	17
AUX / Coaxial / Optical / USB Operation.....	17
<b>Bluetooth® Operation</b> .....	19
<b>Hints and Tips</b> .....	20
<b>Specifications</b> .....	21
<b>Notes for battery disposal</b> .....	22
<b>Safety</b> .....	23
<b>Warranty</b> .....	24

## Safety Warnings

- Read all the instructions carefully before using the sound bar and keep them for future reference.
- Keep the manual. If you pass the sound bar onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your sound bar voltage.

### Damage

- Please inspect the sound bar for damage after unpacking.
- If the sound bar is damaged in any way please contact customer service.

### Location of Product

- The product must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the product on sloped or unstable surfaces as the product may fall off or tip over.
- The AC socket must be located near the product and should be easily accessible.

### Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the product well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

### Open Flames

- Never place any type of candle or open flame on the top of or near the product.

### Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the product.
- If you spill any liquid into the product, it can cause serious damage. Switch it off at the sound bar immediately. Withdraw the sound bar plug and consult your dealer.

### Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this product in a bookcase, built-in cabinet or in another confined space. Ensure the product is well ventilated.

### Safety

- Always disconnect the product from the AC supply before connecting / disconnecting other devices or moving the product.
- Unplug the product from the AC socket during a lightning storm.

### Sound bar Adapter

- The sound bar adapter will continue to draw electricity from the sound bar supply when plugged in the AC socket. In the interests of safety and to avoid unnecessary energy consumption, never leave the adapter plugged in the sound bar socket for long periods of time. Disconnect the adapter from the power supply.

### Sound bar Adapter Cable

- Make sure the product or product stand is not resting on top of the sound bar adapter cable, as the weight of the product may damage the cable and create a safety hazard.

### Interference

- Do not place the product on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the product, and cause a distorted picture or sound.

### Batteries

- Batteries used in the remote control for this product are easily swallowed by young children and this is dangerous.
- Please dispose of batteries correctly by following the guidance in this manual.

### Supervision

- Children should be supervised to ensure that they do not play with the product and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

**WARNING: SHOCK HAZARD - DO NOT OPEN**  
**AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRI**

# Safety

## Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this product near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other product (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ product combination to avoid injury from tip-over.



- Unplug this product during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.

### CAUTION

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- The plug of sound bar adapter is used as the disconnect device, the disconnect device shall remain readily operable.
- The product is designed to use in moderate climates.

### Warning

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.
- This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

## Customer Service

### How to get customer service

- Call 1- 888-388-5666, E-mail:customerservice@elementelectronics.com
- Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Element TV Company, LP Customer Service based upon the Element TV Company Limited Warranty Statement.
- At the sole discretion of Element TV Company,LP Customer Service, will either be repaired at an Authorized Service Centre or directly exchanged for a new or refurbished/ remanufactured unit. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Element TV Company,LP Customer Service will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
- Pre-authorization must be obtained before returning the product.

### FCC Statement:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:( 1 )this device may not cause harmful interference.(2)this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure.
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

Thank you for purchasing your new **Element** Sound bar.

We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

## Unpacking

 
---

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:



Main Unit



Remote Control

 

Subwoofer




Subwoofer Cable x 1



Sound bar Adapter



0.14 inches to 0.14 inches  
Stereo Audio Cable

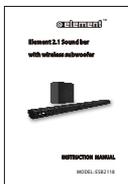


Instruction Manual

# Product Overview

 
## Main Unit

### Front View




- |  |                                    |
|--|------------------------------------|
| 1. LED Indicators<br>Show the current status.  | 5. COAXIAL<br>Green indicator.     |
| 2. Remote Control Sensor<br>Receive signal from the remote control.                                | 6. USB<br>Amber indicator.         |
| 3. Standby / Subwoofer<br>Red indicator.<br>(Standby: solid, subwoofer: to pair with the soundbar) | 7. OPTICAL<br>White indicator.     |
| 4. Bluetooth<br>Blue indicator.  | 8. AUX<br>White & Green indicator. |

### Right side View

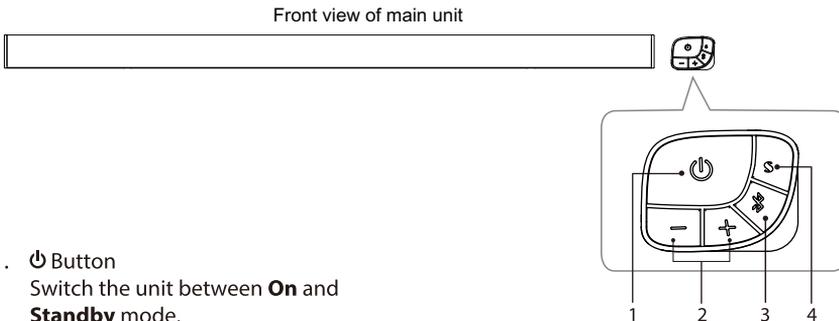


1. **⏻** Button  
Switch the unit between **On** and **Standby** mode.
2. **VOL - / +** Button  
Adjust the volume.
3. **Bluetooth Button**  
Select Bluetooth input.
4. **SOURCE** Button  
Select the input source.

## Rear View

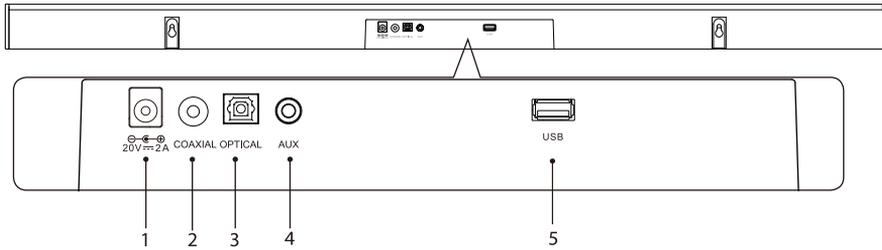

1. **Power** input socket
2. **COAXIAL** input socket
3. **OPTICAL** input socket
4. **AUX** input socket
5. **USB** input socket


## Rear View of Subwoofer

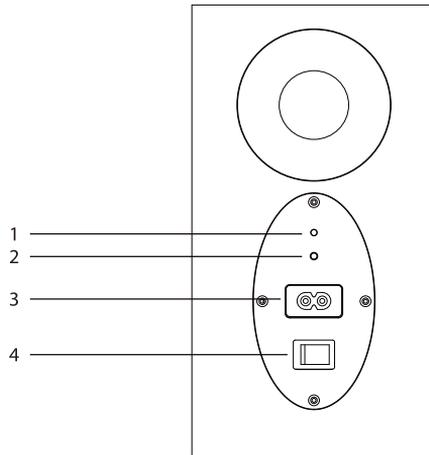

1. **POWER** Indicator  
Light up orange when the pairing succeed.
2. **PAIR** Button  
Pair with the main unit.
3. **AC 100~240V** Power Socket
4. **ON/OFF** Switch  
Switch the subwoofer **ON** or **OFF**.

## Remote Control

1. **⏻ Button**  
Switch the unit between **On** and **Standby** mode.
2. **VOL - / + Buttons**  
Adjust the volume.
3. **SUB - / + Buttons**  
Adjust the subwoofer sound level.
4. **⏮ / ⏪ / ⏩ / ⏭**  
short press to control music playback: PREVIOUS track, pause / play, next track on **USB & BT** mode.
5. **COAX Button**  
Switch between **COAXIAL** mode.
6. **AUX Button**  
Switch between **AUX** mode.
7. **⏸ Button**  
Mute the unit or resume the sound.
8. **TRB -/+ Buttons**  
Adjust the treble sound level.
9. **USB Buttons**  
Switch between **USB** mode.
10. **OPTICAL Buttons**  
Switch between **OPTICAL** mode.
11. **🔗 PAIR Button**  
Direct switch to **Bluetooth®** mode. Press and hold to enable **Bluetooth®** pairing in **Bluetooth®** mode. If there is an existing connection, press and hold to disconnect the paired **Bluetooth®** device. The unit will then enter pairing mode.

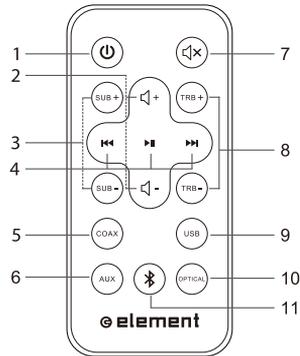


## Preparation



### Battery Replacement for the Remote Control

The remote control requires a CR2025, 3V Lithium battery.

 1. Slide and hold the battery release tab in the direction of the arrow.
2. Pull out the battery holder and remove the old battery.




  3. Replace with a new battery.
4. Insert the battery holder back into the remote control.



## Remove the Plastic Strip from the Remote Control

Remove the plastic strip from the battery if the battery is being used for the first time. It is located at the bottom rear of the remote control.

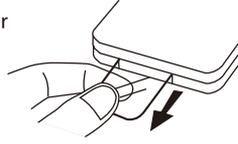

### Handling the Battery

- Install the battery correctly in the battery compartment. Normally the battery's positive polarity (+) will face up.
- A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.
- Small button cell batteries such as the one used in the remote control are easily swallowed by young children and this is dangerous. Keep loose button cells away from young children and make sure that the battery is secure in the remote control. Seek medical advice if you believe a battery cell has been swallowed.

### Handling the Remote Control


- Take care of your fingernails when you slide and pull the battery release tab.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and / or property damage, and / or fire.
- When the battery is exhausted, the remote control will not function.

### CAUTION


Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type.

## Remote Control Operation Range

- The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 16 feet away and within a maximum of a 60° arc.
- Please note that the operating distance may vary depending on the brightness of the room.

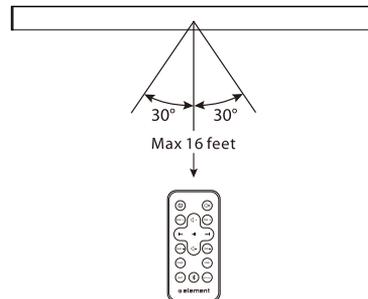

## Speakers Placement

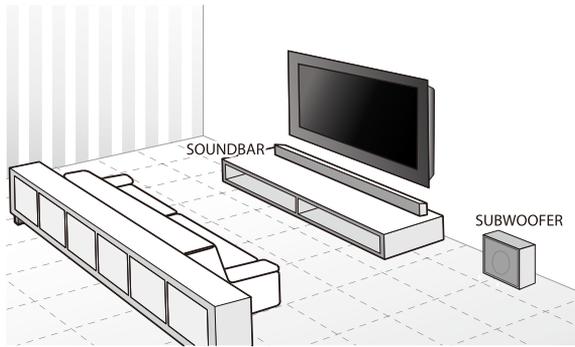

- The subwoofer should be within 16 feet of the soundbar in an open area (the closer the better).
- Do not put anything on the top of the subwoofer.

### ***Soundbar***

Soundbar carries most of the dialog as well as music and effects.

- If your TV is placed on a table, you can place the soundbar on the table directly in front of the TV stand, centered with the TV screen.
- If your TV is attached to a wall, you can mount the soundbar on the wall directly below the TV screen.

### ***Subwoofer***

A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.).

- The performance of a subwoofer is directly related to its placement in the listening room. Experiment with placement before choosing a final location for your subwoofer. Find the location where the bass performance is best.

## Wall Mounting




- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the Soundbar.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

1. Drill 2 parallel holes ( $\varnothing$  0.32 inches each according to wall type) in the wall. The distance between the holes should be 23.23 inches.


Percez 2 trous parallèles ( $\varnothing$  0,32 pouces chacun selon le type de mur) dans le mur.

La distance entre les trous devrait être de 23,23 pouces.

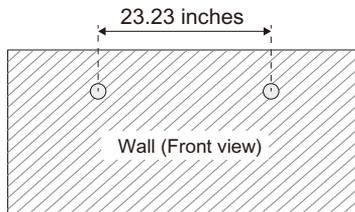

2. Firmly fix 1 dowel D0.4\*L1.2 inches (not included) into each hole in the wall if necessary.

Fixer fermement 1 cheville D0.4 \* L1.2 pouces (non incluse) dans chaque trou dans le mur si nécessaire.


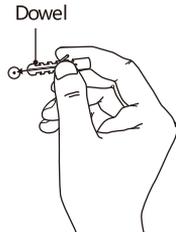


Solid wall (i.e., Solid brick,  
Solid concrete, Solid wood,  
Solid wooden battens)



Drywall, Plaster wall,  
Lath wall, etc.

3. Insert 1 screw TA0.16\*1.58 inches (not included) into each dowel. Be sure to leave a 0.24 inches gap between the wall and the screw's head. Lift the unit over the heads of the screws and slot into place.

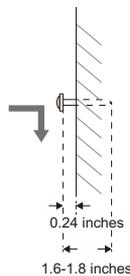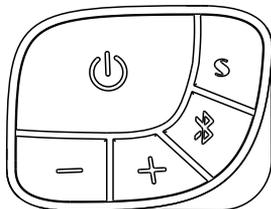

Insérez une vis TA0.16 \* 1.58 pouces (non incluse) dans chaque cheville. Assurez-vous de laisser un 0,24 pouces d'espace entre le mur et la tête de la vis.

Soulevez l'unité sur les têtes de les vis et la fente en place.

# Connections




This section involves various methods of connecting the product to other external components. Ensure all audio connections of the unit are connected before connecting to the mains power socket.

## Method 1: Optical / Coaxial Connection

Use an optical cable / coaxial cable (both not included) to connect the soundbar's **OPTICAL / COAXIAL** socket to the **OPTICAL OUT / COAXIAL OUT** socket of the external device. The simplest option is to connect your soundbar directly to your TV. If you connect the soundbar to another external device (e.g. Blu-Ray player), you will hear the sound from that device through the soundbar.

After connection, press **SOURCE** on the unit repeatedly or **OPTICAL** or **COAXIAL** on the remote control to select **OPTICAL** or **COAXIAL** to play audio from your input device.

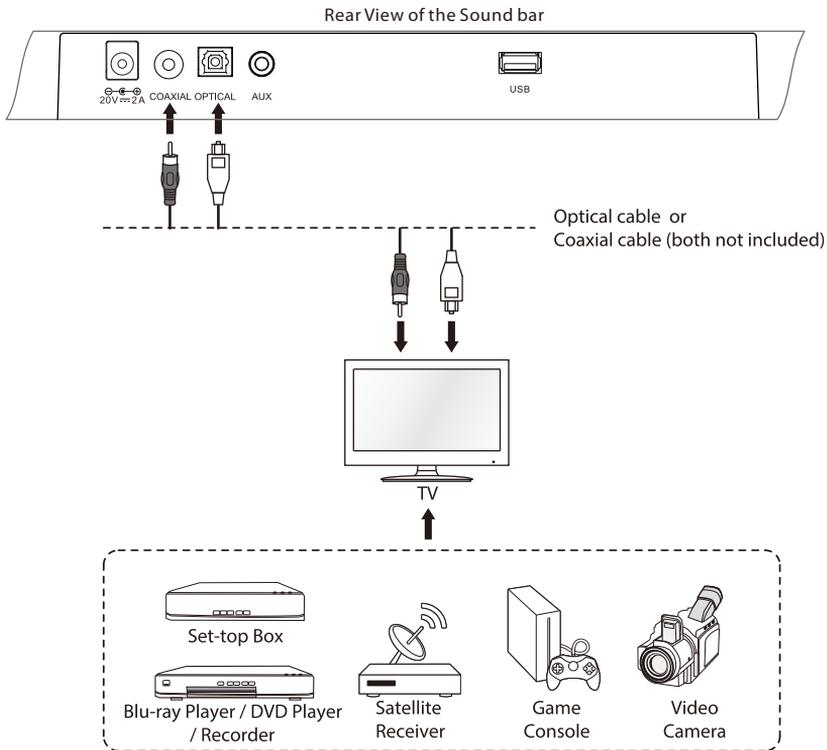


The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** (Refer to the user manual of the input source device for its audio setting details) with optical / coaxial input.

## Method 2: AUX Connection

### Connecting an MP3 Player

Use a 0.14 inches to 0.14 inches stereo audio cable (included) to connect the soundbar's AUX to the headphone socket of the external device.

After connection, press **SOURCE** on the unit repeatedly or **AUX** on the remote control to select **AUX** to play audio from your input device.

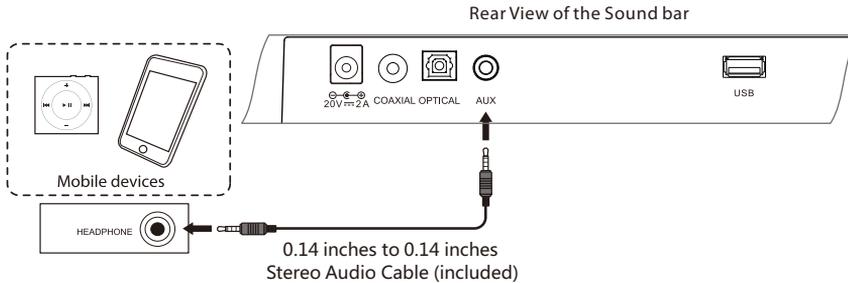

### Connecting to sound bar and subwoofer supply


The sound bar and subwoofer are designed to operate with the supplied sound bar adapter and subwoofer cables.



- Connecting the unit to any other power source may damage the unit.
- Ensure all audio connections of the unit are connected before connecting to the AC power socket.
- Make sure the product plug is firmly inserted into the AC socket.
- To switch the unit off completely, remove the product plug from the AC socket.
- Please turn the unit off completely to save energy when not in use.
- The sound bar adapter and subwoofer cable are designed for this Element soundbar only. DO NOT use the sound bar adapter and subwoofer cable for other purposes.

#### Sound bar


Unwind the sound bar adapter cable to its full length. Connect sound bar cable to the sound bar adapter and then connect to the  **20V 2A** socket on the rear of the product and an AC socket at the other end. Make sure the sound bar adapter is fully inserted into the AC socket.

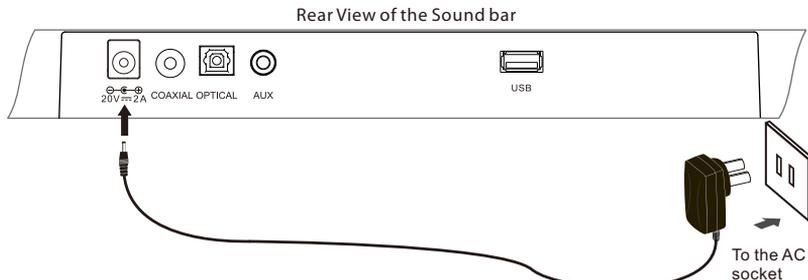

## Subwoofer

Connect the other end of the subwoofer cable to the **AC 100-240V** socket at the rear of the subwoofer then connect the subwoofer plug to the AC socket.

Rear View of the Subwoofer

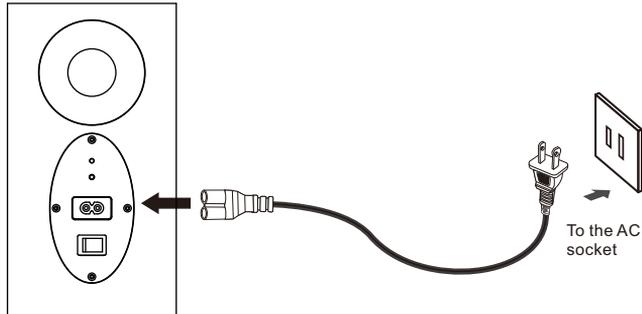

## Pairing the Wireless Subwoofer with the Soundbar

### Automatic Pairing

Plug the sound bar and the subwoofer into the AC sockets and switch on the subwoofer. Press **⏻** on the unit or on the remote control to switch the unit to **On** mode. The red indicator will blink. Then the subwoofer and sound bar will automatically paired within 30 seconds.



Do not press **PAIR** on the rear of the subwoofer, except for manual pairing.

### Manual Pairing



It is very abnormal that the connection would fail. You should not attempt manual pairing in normal usage.

If the automatic pairing fails or the subwoofer is switched **OFF**, the red indicator will rapidly blink. Ensure that all the cables are well connected, the main unit and the subwoofer is switched to **On** mode. If it still doesn't work, pair the subwoofer with the soundbar manually.

1. Unplug both units from the AC sockets, then plug them in again after 3 minutes.
2. Press and hold the **PAIR** button on the rear of the subwoofer, and then press and hold **VOL+** and **SOURCE** on the unit for a few seconds to start pairing. The pair indicator on the subwoofer will blink when pairing and will become solid when successful.
3. While the unit is pairing with the subwoofer, the red indicator will blink.
4. After the subwoofer is paired with the unit, the red indicator will become solid for 10 seconds and then turn off .



- After connecting the power, you must press **PAIR** on the subwoofer within 20 seconds to be effective.
- The subwoofer should be within 16 feet of the soundbar in an open area.
- If the wireless connection fails again, check if there is conflict or strong interference (for example, interference from an electronic device) around your location. Remove these conflicts or strong interferences and repeat the above procedures.



This instruction manual explains the basic instructions for operating this unit. Unless otherwise stated, all operations described are based on remote control use.

## General Operation

### Standby / ON

When you first connect the unit to the AC socket, the unit will be in **Standby** mode.

- During **Standby** mode, the **POWER** indicator of the subwoofer will be off. Press  on the unit or on the remote control to switch the unit on. All indicators will light for 5 seconds and the unit will return to the last used mode. When the unit is switched on, the sound level will be fixed to level 15 (if the unit was at less than level 15 previously, the sound level will remain unchanged)
- Press  on the unit or on the remote control again to switch the unit back to **Standby** mode, the red indicator will become solid.

### Automatic Power Off Function

The unit automatically turns to **Standby** mode after about 10 minutes if the TV or the external unit is disconnected, switched off or the volume is too close to mute.



- To switch the unit off completely, remove the sound bar plug from the AC socket.
- Please turn the unit off completely to save energy when not in use.

### Selecting Modes

Press **SOURCE** on the unit repeatedly to select between **AUX**, **BT** (*Bluetooth*®), **COAXIAL**, **OPTICAL**, **USB**.



Alternatively,

- press **AUX** on the remote control to select **AUX** mode.
- press **COAXIAL** on the remote control to select **COAXIAL** mode.
- press **OPTICAL** on the remote control to select **OPTICAL** mode.
- press **USB** on the remote control to select **USB** mode.
- Press  **PAIR** on the remote control to select **BT** (*Bluetooth*®) mode directly.

## Adjusting the Speaker Level Settings and Effects

### Adjusting the Volume

- ★ Press **VOL + / -** to adjust the volume.
  1. Volume = level 0: min volume, the white indicator rapidly blink.
  2. Level 0 < volume ≤level 6: the white indicator light.
  3. Level 6 < volume ≤level 12: the white and amber indicator light.
  4. Level 12 < volume ≤level 18: the white, amber and green indicator light.
  5. Level 18 < volume ≤level 24: the white, amber, green and blue indicator light.
  6. Level 24 < volume ≤level 30: the white, amber, green, blue and red indicator light.
  7. Volume = level 30: max volume, the white, amber, green and blue indicator light and the red indicator rapidly blink.
  
- ★ If you wish to turn the sound off, press  $\text{⏏}$  on the remote control. The red and white indicators will light at the same time. Press  $\text{⏏}$  again, or press **VOL + / -** on the unit or on the remote control to resume normal listening. Then the corresponding volume indicator will light 3 seconds and turn off.

### Adjusting the Subwoofer and Treble Volume Level

 
Press **SUB + / -** repeatedly to adjust the bass volume level from **SUB MIN** (-12) to **SUB MAX** (12). Each press will increase or decrease 2 level.

Press **TRB + / -** repeatedly to adjust the bass volume level from **TREBLE MIN** (-12) to **TREBLE MAX** (12). Each press will increase or decrease 2 level.

1. Level -12, -10, -8: the white, amber and green indicator light.
2. Level -6, -4, -2: the amber and green indicator light.
3. Level 0: the green indicator light.
4. Level 2, 4, 6: the green and blue indicator light.
5. Level 8, 10, 12: the green, blue and red indicator light.



When input signal cannot be decoded (e.g. Dolby, DTS Studio Sound I etc.), the unit is mute and the corresponding mode indicator rapidly blink.



rapidly blink

## AUX / Coaxial / Optical Operation

There are **COAXIAL / OPTICAL / AUX** and **USB** sockets located at the rear of the unit. Analogue audio sound signals from other sources can be connected to the unit through these sockets.

1. Before connecting to the AC socket, ensure all the connections are completed.
2. While in the **On** mode, press **SOURCE** on the unit repeatedly to select between **AUX**, **BT** (Bluetooth®), **COAXIAL**, **OPTICAL**, **USB** mode.



Alternatively,

- press **AUX** on the remote control to select **AUX** mode.
- press **COAXIAL** on the remote control to select **COAXIAL** mode.
- press **OPTICAL** on the remote control to select **OPTICAL** mode.
- press **USB** on the remote control to select **USB** mode.
- Press  **PAIR** on the remote control to select **BT (Bluetooth®)** mode directly.

3. Operate your audio device directly for playback features.

## USB Operation

Plug **USB** into the unit rear **USB** socket, Press **SOURCE** on the unit repeatedly or press **USB** on the remote control to select **USB** mode, the amber indicator will become solid.

Short press  /  /  buttons to control music playback : PREV track, pause/play, next track.



**USB** support FAT 16/32 & exFAT, Music format support list:

FORMAT		SAMPLE RATE	BIT RATE
WAV	IMA-ADPCM	8~48kHz	32kbps ~ 384kbps
	MS-ADPCM	8~48kHz	32kbps ~ 384kbps
	PCM	8~48kHz	128kbps ~ 1536kbps
MP3	MP1	8~48kHz	32kbps ~ 448kbps
	MP2		8kbps ~ 384kbps
	MP3		8kbps ~ 320kbps
WMA		8~48kHz	5kbps ~ 384kbps
FLAC		8~48kHz	1000kbps ~ 1200kbps
APE		8~48kHz	800kbps ~ 1000kbps

# Bluetooth® Operation

---

Pairing the unit with a *Bluetooth*® device to listen to music:

## First time pairing

1. During **On** mode, press **SOURCE** on the unit repeatedly or press  **PAIR** on the remote control to select *Bluetooth*® mode. The blue indicator will blink.
2. Activate your *Bluetooth*® device and select the search mode. “**ESB2118**” will appear on your *Bluetooth*® device list.
3. Select “**ESB2118**” and enter “**0000**” for the password if necessary. After pairing, the blue indicator will become solid.
4. Press and hold **Bluetooth** on the unit or  **PAIR** on the remote control to clear all pairing setting. The unit will enter pairing mode, and the blue indicator will blink. Follow step 2-3 to pair your *Bluetooth*® device.

## Bluetooth® device already in the connection memory

1. After entering the *Bluetooth*® mode, the blue indicator will blink.
2. The unit will automatically reconnect with the *Bluetooth*® device. After pairing, the blue indicator will become solid.

If your *Bluetooth*® device supports A2DP, play music via your device.

To disconnect the *Bluetooth*® function, switch to another function on the unit or disable the function from your *Bluetooth*® device. You may also press and hold **SOURCE** on the unit or  **PAIR** on the remote control to disconnect current connection and go to new Bluetooth Pairing. The blue indicator will blink and the unit is now ready for pairing. Follow step 2-3 in “**First time pairing**” above to pair your *Bluetooth*® device.



- The operational range between the unit and the device is approximately 20 feet.
- Before connecting a *Bluetooth*® device to the unit, ensure you know the devices capabilities.
- Compatibility with all *Bluetooth*® devices is not guaranteed.
- Any obstacle between the device and the unit can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

Short press  /  /  buttons to control music playback : PREV track, pause/play, next track.

## Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips.

Problem	Solution
No power.	<ul style="list-style-type: none"> <li>• Ensure the sound bar plug is connected.</li> <li>• Make sure that you select the <b>On</b> mode.</li> </ul>
The remote control does not function.	<ul style="list-style-type: none"> <li>• Use the remote control near the unit.</li> <li>• Point the remote control at the remote sensor on the unit.</li> <li>• Replace the battery in the remote control with a new one.</li> <li>• Remove any obstacles between the remote control and the unit.</li> </ul>
Loud hum or noise is heard.	<ul style="list-style-type: none"> <li>• The plugs and sockets are dirty. Wipe them with a cloth slightly moistened with alcohol.</li> </ul>
No sound from the sound bar and subwoofer.	<p>Please try either one of the solutions below:</p> <ul style="list-style-type: none"> <li>• Make sure that the unit is not muted. Press <math>\llcorner</math>x or <b>VOL + / -</b> button to resume normal listening.</li> <li>• Press <math>\Psi</math> on the unit or on the remote control to switch the soundbar to standby mode. Then press the button again to switch the sound bar on.</li> <li>• Unplug both the soundbar and the subwoofer from the AC socket, then plug them again. Switch on the soundbar.</li> <li>• Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to <b>PCM</b> mode while using digital (e.g. <b>OPTICAL, COAXIAL</b>) connection.</li> <li>• The subwoofer is out of range, please move the subwoofer closer to the sound bar. Make sure the subwoofer is within 16 feet of the sound bar (the closer the better).</li> <li>• The sound bar may have lost connection with the subwoofer. Re-pair the units by following the steps on the section "<b>Pairing the Wireless Subwoofer with the Sound bar</b>".</li> <li>• The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect.</li> </ul>
The unit does not respond when pressing any buttons.	<ul style="list-style-type: none"> <li>• The unit may freeze up during use. Switch the unit off and then on again at the AC socket to reset the unit.</li> </ul>

Problem	Solution
Intermittent sound output from subwoofer.	<ul style="list-style-type: none"> <li>You are at the operating limit of the subwoofer. Move the subwoofer closer to the Soundbar (the closer the better) or remove obstacles from between the soundbar and Subwoofer.</li> </ul>
I cannot find " <b>ESB2118</b> " on my <i>Bluetooth</i> ® device.	<ul style="list-style-type: none"> <li>Ensure the <i>Bluetooth</i>® function is activated on your <i>Bluetooth</i>® device.</li> <li>Ensure you have paired your unit with the <i>Bluetooth</i>® device.</li> </ul>



If anything unexpected happens, unplug the sound bar adapter from the socket and reconnect again.

## Specifications

<b>Model</b>	ESB2118
<b>Sound bar</b>	
<b>Power Adapter Input</b>	AC 100 - 240 V~ 50/60 Hz, 1A
<b>Power Adapter Output</b>	DC 20 V $\equiv$ 2 A $\ominus$ $\oplus$
<b>Main Unit Input</b>	DC 20 V $\equiv$ 2 A $\ominus$ $\oplus$
<b>Power Consumption of Standby Mode</b>	< 0.5 W
<b><i>Bluetooth</i>®</b>	<i>Bluetooth</i> ® 4.2 (A2DP)
<b>Signal to Noise Ratio</b>	> 65 dB
<b>Net Weight</b>	3.1 LBS
<b>Dimension</b>	37.4(W) x 1.9(H) x 2.5(D) inches
<b>Subwoofer</b>	
<b>Power Supply</b>	AC100-240 V ~ 50/60 Hz
<b>Power Consumption</b>	40 W
<b>Network Standby Power Consumption</b>	2.0 W (max.)
<b>Net Weight</b>	5.8 LBS
<b>Dimension</b>	4.8(W) x 9.1(H) x 10.5(D) inches

Features and specifications are subject to change without prior notice.

### **WARNING**

Do not ingest the battery, Chemical Burn Hazard  
(The remote control supplied with) This product contains a button cell battery. If the button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention

### **AVERTISSEMENT**

Ne pas ingérer la pile, Danger de brûlure chimique  
(La télécommande fournie avec) Ce produit contient une pile bouton. Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en 2 heures seulement et peut entraîner la mort.

Conserver les piles neuves et usées hors de portée des enfants.

Si le compartiment pile ne se ferme pas correctement, cesser d'utiliser le produit et tenir hors de portée des enfants.

En cas de doute concernant le fait que les piles pourraient avoir été avalées ou introduites dans une partie quelconque du corps, consulter immédiatement un médecin.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.



#### **Notes for battery disposal**

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

- minimum distances 10cm around the apparatus for sufficient ventilation;
- distance minimale 10cm autour de l'appareil pour une aération suffisante;
- the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;
- il convient que l'aération ne soit pas gênée par l'obstruction des ouvertures d'aération par des objets tels que journaux, nappes, rideaux, etc.;
- no naked flame sources, such as lighted candles, should be placed on the apparatus;
- il convient de ne pas placer sur l'appareil de sources de flammes nues, telles que des bougies allumées;
- attention should be drawn to the environmental aspects of battery disposal;
- il convient d'attirer l'attention sur les problèmes d'environnement dus à la mise au déchet des piles;
- the use of apparatus in moderate climates.
- si l'appareil est destiné à être utilisé sous un climat tempéré et
- the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- l'appareil ne doit pas être exposé à des égouttements d'eau ou des éclaboussures et de plus qu'aucun objet rempli de liquide tel que des vases ne doit être placé sur l'appareil.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- les batteries (bloc de batteries ou batteries installées) ne doivent pas être exposées à une chaleur excessive telle que celle du soleil, d'un feu ou d'origine similaire.
- Caution Marking and rating plate was located at rear enclosure of the apparatus.
- Les marquages sont inscrits en arrière de l'appareil. Les précautions d'emploi sont inscrites en arrière de l'appareil.
- Excessive sound pressure from earphones and headphone can cause hearing loss.
- Des pressions acoustiques excessives provenant d'écouteurs ou de casques peuvent provoquer des pertes de l'audition.
- where the MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.
- lorsque la prise du RESEAU D'ALIMENTATION sur l'appareil est utilisée comme appareil de déconnexion, cet appareil doit demeurer aisément accessible.
- CAUTION Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type.
- ATTENTION Danger d'explosion si la pile n'est pas remplacée correctement.  
Ne remplacer que par le même type ou un type équivalent.

WARNING: SHOCK HAZARD - DO NOT OPEN

AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

## Warranty

### **ELEMENT SOUND BAR LIMITED WARRANTY TO ORIGINAL CONSUMER ELEMENT Sound Bar- All Models (the "Product")**

This Product (including any accessories included in the original packaging) as supplied and distributed in new condition, is warranted by Element TV Company, LP ("Element") to the original purchaser against defects in material and workmanship ("Warranty") as follows:

#### **1. WARRANTY SERVICE (Parts, Labor and/or Replacement):**

For a period of **one (1) year** from the date of the original customer purchase ("the Warranty Period"), if this Product or any of its parts are determined by Element or an Element authorized customer service provider to be defective in material or workmanship, Element will, at its sole discretion and option, (i) supply, at no charge to the original customer, new or rebuilt replacement parts in exchange for defective parts, (ii) repair the Product and pay the labor charges of such Element authorized service provider for same, at no charge to the original customer, and/or (iii) replace the Product with a new or refurbished product of similar or better quality, at no charge to the original customer. After the Warranty Period, the customer must pay for all parts, labor and replacement costs associated with the Product, regardless of any defects in the Product.

**A. SHIPPING COSTS:** Notwithstanding the foregoing, the customer is responsible for any shipping or transportation charges incurred to ship or otherwise deliver the Product or part(s) to Element or an Element authorized service provider for diagnosis, repair or replacement. The customer shall not return the Product to Element without Element's prior written consent. Element recommends that the customer insure the Product for its full replacement cost when shipping.

**B. TIMING AND PROCEDURE:** Before Warranty Service can commence, the original customer purchaser must contact Element for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the Warranty Period, **MUST** be presented to an Element authorized customer service provider in order to obtain the requested service. Please call the Toll Free Customer Service Line at 1-888-338-5666 to obtain Warranty Service and Troubleshooting information. Please have your model and serial number available, along with your date of purchase of the Product. You can also visit us online at: [www.elementelectronics.com](http://www.elementelectronics.com).

#### **2. EXCLUSIONS AND LIMITATIONS TO WARRANTY SERVICE**

This Warranty covers manufacturing defects in materials and workmanship encountered in the normal, non-commercial use of the Product, and does not cover (a) damage or failure caused by or attributable to Product abuse or

permitted by law and unless restricted or prohibited by law. Where any term of this Warranty is prohibited by applicable law, it shall be null and void, but the remainder of this Warranty shall remain in effect.

**Please DIRECT all correspondence to:**

Element TV Company, LP Customer  
Servicecustomerservice@elementelectronics.com  
1-888-338-5666  
www.elementelectronics.com

PLEASE CONTACT CUSTOMER SERVICE TO CONFIRM ADDRESSES AND PROCEDURES FOR WARRANTY SERVICE.

misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, or excess voltage or current; (b) improper or incorrectly performed repairs by non-authorized service facilities; (c) onsite customer instruction or adjustments; (d) transportation, shipping, delivery, insurance, installation or set-up costs; (e) costs of product removal, transportation or reinstallation costs; (f) ordinary wear and tear, cosmetic damage or damage due to acts of nature, including but not limited to water, floods, wind, tornado, earthquake or fire, or due to damage caused by automobile accidents or extraordinary impact events, such as dropping or crushing; (g) commercial use of the Product; (h) modification of the Product or to any part of the Product.

This Warranty applies to the original consumer only and does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (e.g., fuses, batteries, etc.). The Warranty is invalid if the factory-applied serial number has been altered or removed from the Product. This Warranty is valid only in the United States and Canada, and only applies to products purchased and serviced in the United States and Canada. All replaced parts and Products, and Products on which a refund is made, become the property of Element. The addition of equipment or features to the Product that are not manufactured or recommended by Element could affect the intended function of the Product, and therefore may void the Warranty. The Warranty is contingent upon the proper use, maintenance and care of the Product. The Warranty may be void if the Product has been used in a manner contradictory to or in violation of the terms of the user's manual, warnings or instructions accompanying the Product.

This Warranty is made in lieu of and supersedes all other warranties or conditions of merchantability or fitness for a particular purpose or general use, whether express, implied, collateral, statutory, or provided by common law, the Uniform Commercial Code or otherwise. Element further disclaims all warranties after the end of the Warranty Period defined above. No other express warranty or guaranty given by any other person, firm or entity with respect to the Product shall be binding on Element. Repair, replacement, or refund of the original purchase price, at Element's sole discretion, are the exclusive remedies of the customer. Element shall not be liable for any incidental or consequential damages caused by the use, misuse or inability to use the Product. These include but are not limited to any damages in the form of lost profits, loss of use, legal fees, economic loss, personal injuries, or any other damages caused by circumstances beyond the control of Element. Notwithstanding the foregoing, the customer's recovery shall not exceed the purchase price of the Product. This Warranty shall not extend to anyone other than the original customer who purchased the Product, and is not transferrable. No person is authorized to alter, extend or waive the Warranty of Element.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on warranties, so the above limitations or exclusions may not apply to you. This Warranty gives you specific rights, and you may have other rights, which vary from state to state. The exclusions and limitations to the Warranty apply to the maximum extent

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.