PORTABLE MONITOR QUICK START CARD

How to Use the Folio Case:

The folio case provides protection and can be used to support the monitor as a stand. Its integrated design is built-in to the monitor and should not be removed.

Step 1:
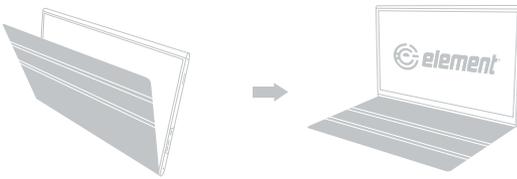
Align the folio case with the opening at the top and the screen facing forward.

Step 2:
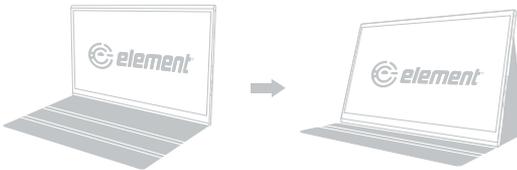
With the folio case open, stand the screen up and place it in a groove of the cover.

Step 3:
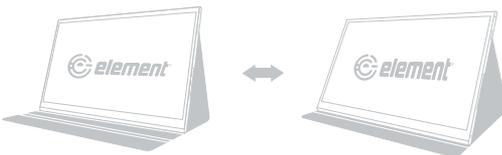
Adjust the screen to your desired angle by placing in either of the grooves.

PORTABLE MONITOR QUICK START CARD

Common Connectivity Options:

Connect to USB-C Devices

USB-C to USB-C Cable
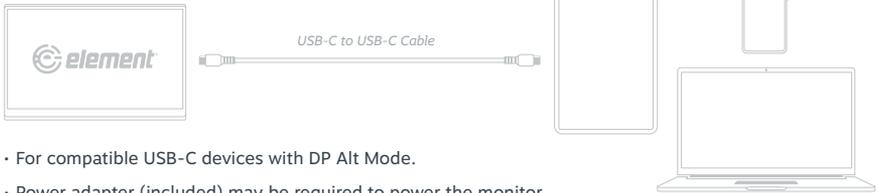
- For compatible USB-C devices with DP Alt Mode.
- Power adapter (included) may be required to power the monitor if source device does not have adequate power supply.
- Touchscreen functionality is supported by compatible USB-C (DP Alt Mode) Windows devices only.

Connect to HDMI® Devices
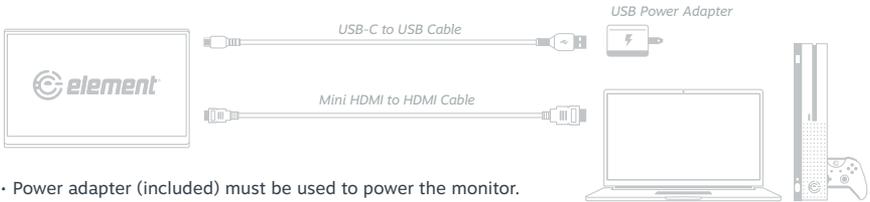
USB-C to USB Cable

USB Power Adapter

Mini HDMI to HDMI Cable

- Power adapter (included) must be used to power the monitor.
- Touchscreen functionality is not supported for this connection type.

Connect to iOS Devices
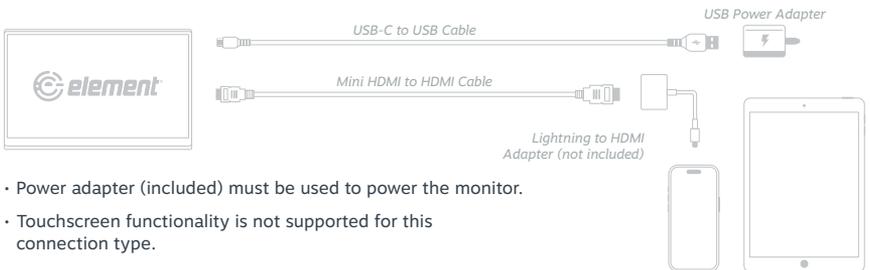
USB-C to USB Cable

USB Power Adapter

Mini HDMI to HDMI Cable

Lightning to HDMI Adapter (not included)

- Power adapter (included) must be used to power the monitor.
- Touchscreen functionality is not supported for this connection type.

Illustrations are for example purposes only. Compatible devices and functionality may vary.
Please visit elementelectronics.com for more details on compatibility.

FOR SUPPORT, VISIT ELEMENTELECTRONICS.COM/SUPPORT